



---

## STM32CubeIDE quick start guide


### Introduction

This document is a brief guide for users to get started quickly with STMicroelectronics [STM32CubeIDE](#).

STM32CubeIDE is an integrated development environment (IDE) based on the Eclipse® framework. It is aimed at users developing embedded software in C/C++ for STMicroelectronics STM32 MCUs and MPUs.

This manual provides basic information about:


- [Information Center](#)
- [Workspace and projects](#)
- [Project information](#)
- [Debugging](#)

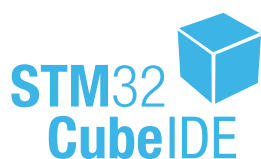

## 1 Information Center

When STM32CubeIDE is started the first time, the *Information Center* opens.

Figure 1. STM32CubeIDE with *Information Center*

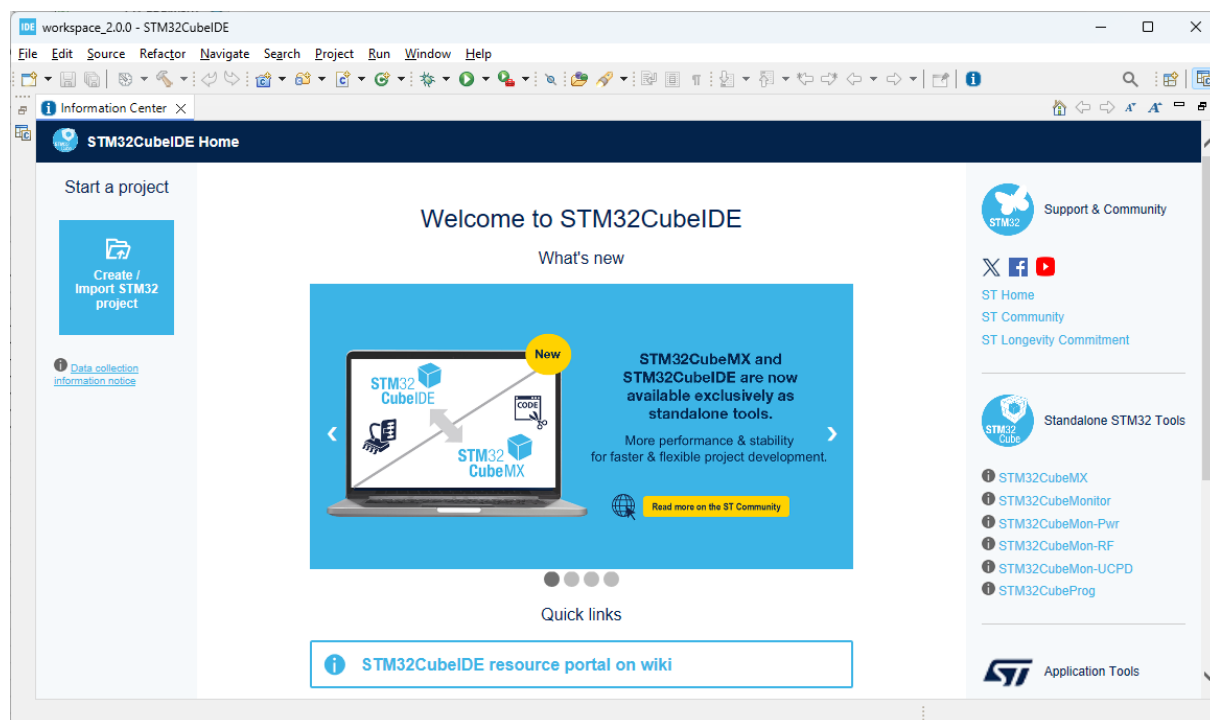

The *Information Center* enables the user to quickly reach information about the product and how to use it. By clicking on the corresponding hypertext links, manuals are opened and latest information is obtained from the STMicroelectronics website at [www.st.com](http://www.st.com).

It is not required to read all material before using STM32CubeIDE for the first time. Rather, it is recommended to consider the *Information Center* as a collection of reference information to return to.

The *Information Center* window can be reached at any time via the [Help]>[Information Center] command. When the *Information Center* tab is closed, the standard views in the C/C++ perspective are opened.


STM32CubeIDE supports STM32 32-bit products based on the Arm® Cortex® processor.

*Note:* Arm is a registered trademark of Arm Limited (or its subsidiaries) in the US and/or elsewhere.

arm

## 2 Workspace and projects

**Figure 2. STM32CubeIDE with C/C++ perspective open, no project defined yet**

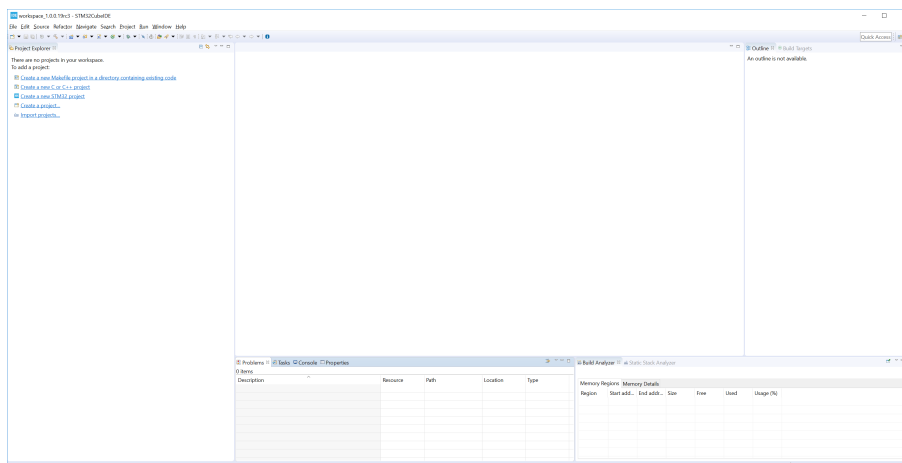

STM32CubeIDE is built using the Eclipse® framework; it inherits characteristics that might be unfamiliar to new users.

The Eclipse® editing environment uses perspectives. A *perspective* is a set of windows dedicated to a purpose.


The C/C++ perspective is dedicated to writing and editing code, and navigating through projects. Users spend a lot of time in this perspective.

Another popular perspective is the *Debug perspective*, where users debug and test. Switching back and forth between perspectives is easy, and can even be automatic in some cases.

**Workspace and projects:** The next thing to do is create a project, which requires to introduce firstly the concept of workspace. A workspace is a container that includes project folders or information about project folders, and a `.metadata` folder that contains information about the projects. A workspace is simply a folder on a hard drive, which can be located anywhere in the storage media. When STM32CubeIDE starts up, it asks which workspace must be used. This may be changed at any time by selecting [File]>[Switch Workspace] and navigating to another folder.

*Note: workspace and project names must contain only ascii characters. This is also valid for the path to the workspace.*

**Figure 3. STM32 project creation**

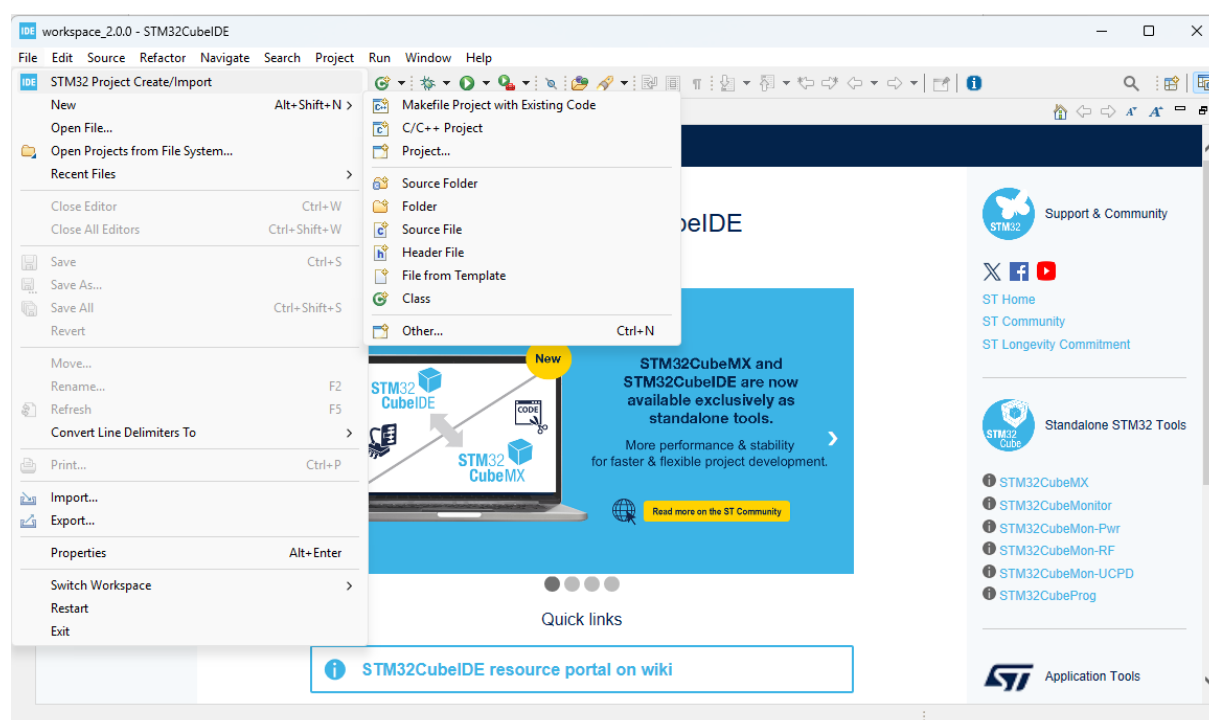


**Creating the first project:** The easiest way to create a new embedded project is to use the *STM32 Project wizard*:

1. Select the **[File]>[STM32 Project Create/Import]>[Create New STM32 Project]** menu command.
2. Select the type of project to be created.
3. Follow the wizard displayed to enter the required data.
4. Click on **[Finish]**.


New projects can be created as well through **[File]>[New]>[Create New STM32 Project]**.

**Figure 4. New project wizard**

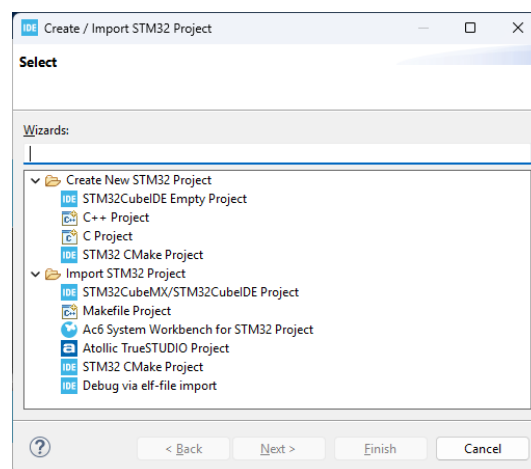

### 3 Project information

Figure 5. *Project Explorer* window populated with a project

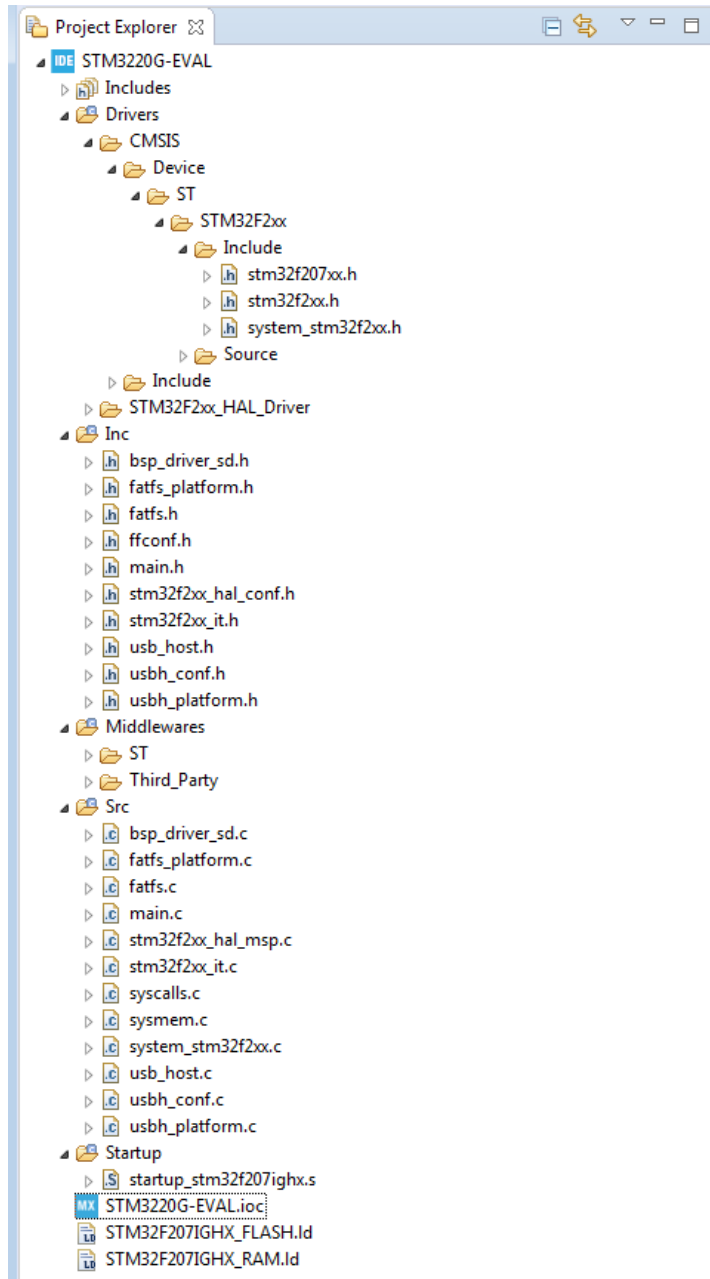


Once the information is entered in the wizard, it is possible to work in the project itself:


- The *Project Explorer* docking view is populated with the selected project. In the *Project Explorer* window, the subfolders can be expanded to any desired sublevel.
- The kind of project created by the *Project Wizard* depends on the device family. In any case, the project contains all the necessary elements of a complete embedded application, ready to program into the memory of the part and run.
- When several projects exist in a workspace, it is possible to close some of them. The actions controlled by the icons such as run, or launch debug session then apply to the open projects.
- Projects can be closed or opened by first right-clicking on the project name in the *Project Explorer* docking view and then selecting [Open Project] or [Close Project].

**Controls:** All control icons have tool tips activated by hovering the mouse over the icon. The icons are shortcuts for the same functions that can be activated from the main menu bar. These icons control specific functions that pertain to code editing, building and project management; they are unique to the *C/C++ perspective*.

**Figure 6. Main control icons for editing, building, and project management**

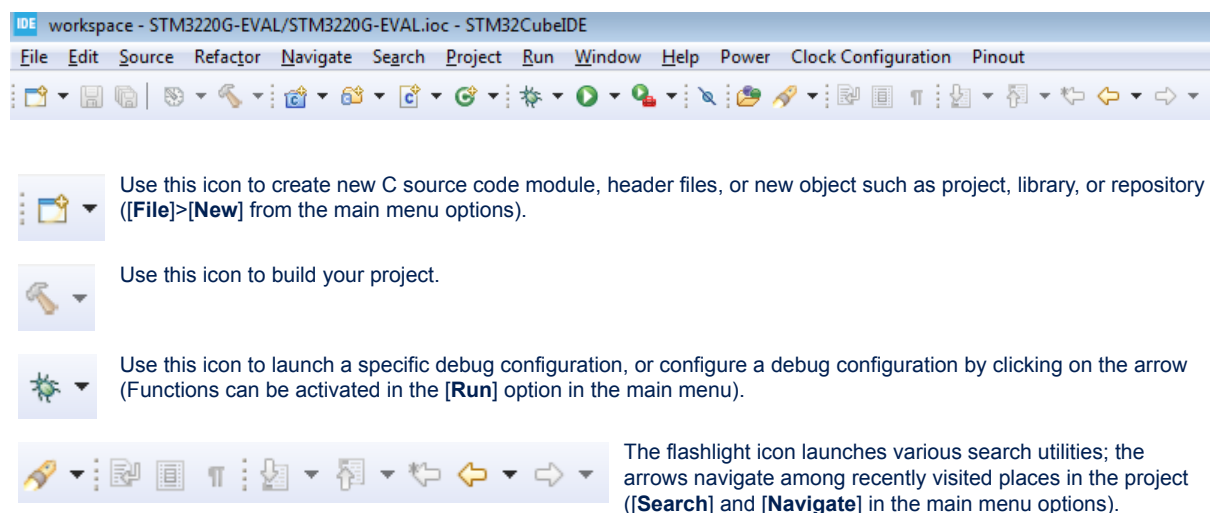

## 4 Debugging








Once the project is built without errors, use the  icon to launch the program code into the part together with the debugger. The first time a debug session is launched, [STM32CubeIDE](#) builds the project and then shows the debug launch configuration menu. This gives the user the opportunity to verify settings and make changes if desired.

**Important:** *If the Serial Wire Viewer (SWV) is to be used during debugging, this must be explicitly enabled in the dialogue box:*

1. Click on the **[Debugger]** tab to reach the SWV settings and enable SWV (SWV is not enabled by default).
2. If changes are made to the default settings in the launch configuration properties dialog box, they must be saved by clicking on the **[Apply]** button.

When ready to launch the debug session, click on **[OK]**. Several things happen “under the hood” including the launch of the debugger driver and GDB server, as well as the programming of the application into the part, and any other actions called for in the startup script. At this point, the application is normally halted at the first line of `main()`.

The main control icons of the debugger are as follows:

	Resume full speed execution of the application on the target (greyed out when running).
	Halt execution (greyed out when halted).
	Step into a function, over a function, or out of a function.
	Toggle between C and instruction stepping.
	Reset the chip and restart execution.
	Terminate the debug session.
	Terminate and relaunch the debug session.

### Basic debugging techniques:

- To set a breakpoint, click on the blue horizontal bar next to the statement line number.
- To view memory locations, use the *Variables* (variables in focus or global variables), *Memory*, or *Expressions* window.

Configuring and using debugging tools, especially with SWV, is frequently more complicated than using the IDE for C/C++ code development. More details on this topic are provided by associated documents available on the [STM32CubeIDE](#) web page, which must be consulted for anything beyond the most basic operations.

## Revision history

**Table 1. Document revision history**

Date	Revision	Changes
18-Apr-2019	1	Initial version.
02-Nov-2020	2	Updated window screenshots and icons.
09-Nov-2021	3	Updated the <i>Information Center</i> screenshot.
06-Nov-2025	4	Updated the <i>Information Center</i> screenshot (Figure 1). Updated the new project creation: <ul style="list-style-type: none"> <li>Added Figure 3. STM32 project creation</li> <li>Updated Figure 4. New project wizard</li> </ul>





## Contents

<b>1</b>	<b>Information Center.....</b>	<b>2</b>
<b>2</b>	<b>Workspace and projects .....</b>	<b>3</b>
<b>3</b>	<b>Project information .....</b>	<b>5</b>
<b>4</b>	<b>Debugging .....</b>	<b>7</b>
	<b>Revision history .....</b>	<b>8</b>
	<b>List of figures.....</b>	<b>10</b>

## List of figures

Figure 1.	STM32CubeIDE with <i>Information Center</i> . . . . .	2
Figure 2.	STM32CubeIDE with <i>C/C++ perspective</i> open, no project defined yet . . . . .	3
Figure 3.	STM32 project creation . . . . .	3
Figure 4.	New project wizard . . . . .	4
Figure 5.	<i>Project Explorer</i> window populated with a project . . . . .	5
Figure 6.	Main control icons for editing, building, and project management . . . . .	6

**IMPORTANT NOTICE – READ CAREFULLY**

STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice.

In the event of any conflict between the provisions of this document and the provisions of any contractual arrangement in force between the purchasers and ST, the provisions of such contractual arrangement shall prevail.

The purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST's terms and conditions of sale in place at the time of order acknowledgment.

The purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of the purchasers' products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

If the purchasers identify an ST product that meets their functional and performance requirements but that is not designated for the purchasers' market segment, the purchasers shall contact ST for more information.

ST and the ST logo are trademarks of ST. For additional information about ST trademarks, refer to [www.st.com/trademarks](http://www.st.com/trademarks). All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

© 2025 STMicroelectronics – All rights reserved