

ST7-DVP3 Emulator User Manual

Release 1.3

November 2004



Ref: DOC-ST7-DVP3



INSTRUCTIONS FOR USE—WARNING

This product is conform to the 89/336/EEC Directive. It complies with the ITE EN55022 (1998 edition) standard for EMC emissions and the 55024 (1998 edition) immunity standards.

This product is an FCC Class-A apparatus. In a residential environment, it may cause radioelectrical disturbances.

In addition, this emulator is not contained in an outer casing; consequently, it cannot be immune against electrostatic discharges (ESD). Please refer to [Appendix A EMC Conformity and Safety Requirements](#) on page 29 for relevant safety information.

USE IN LIFE SUPPORT DEVICES OR SYSTEMS MUST BE EXPRESSLY AUTHORIZED.

STMicroelectronics PRODUCTS ARE NOT AUTHORIZED FOR USE AS CRITICAL COMPONENTS IN LIFE SUPPORT DEVICES OR SYSTEMS WITHOUT THE EXPRESS WRITTEN APPROVAL OF STMicroelectronics. As used herein:

1. Life support devices or systems are those which (a) are intended for surgical implant into the body, or (b) support or sustain life, and whose failure to perform, when properly used in accordance with instructions for use provided with the product, can be reasonably expected to result in significant injury to the user.
2. A critical component is any component of a life support device or system whose failure to perform can reasonably be expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.

Table of Contents

Chapter 1:	Introduction	4
1.1	About the user manuals...	5
1.2	Host PC system requirements	6
1.3	Getting assistance	6
Chapter 2:	Getting Started with ST7-DVP3	7
2.1	Delivery checklist	7
2.2	Quick set up for emulation configuration	10
2.3	Quick set up for ICC configuration	11
Chapter 3:	Connectivity	12
3.1	Parallel port	13
3.2	USB port	14
Chapter 4:	Emulation Configuration	15
4.1	Overview of emulation features	15
4.2	System architecture	16
4.3	Hardware features	17
4.4	Changing configurations	22
4.5	Emulator functional limitations and discrepancies	22
Chapter 5:	In-circuit Communication Configuration	23
5.1	System architecture	23
5.2	ICC connection	24
5.3	Changing configurations	27
Appendix A:	EMC Conformity and Safety Requirements	29
Appendix B:	Changing the TEB	30
Appendix C:	Troubleshooting	32
Appendix D:	Glossary	35
Product Support		39
Index		42

1 INTRODUCTION

Thanks for choosing ST7! This manual will help you set up and start using your **ST7-DVP3 emulator**.

The ST7-DVP3 emulator is the latest generation in the **DVP series** of development emulation systems. It offers start-to-finish control of application development by providing **emulation**, **in-circuit programming (ICP)** and **in-circuit debugging (ICD)** capability in an economical, modular package.

In the emulation configuration, your ST7-DVP3 emulator and **ST7 Visual Develop (STVD7)** software, allow you to emulate your target ST7 while connected to your application board in place of your ST7.

In the in-circuit communication (ICC) configuration, your DVP3 emulator and STVD7 allow you to debug your application while it runs on your ST7, and to program your ST7 microcontroller with ST7 Visual Programmer (STVP7).

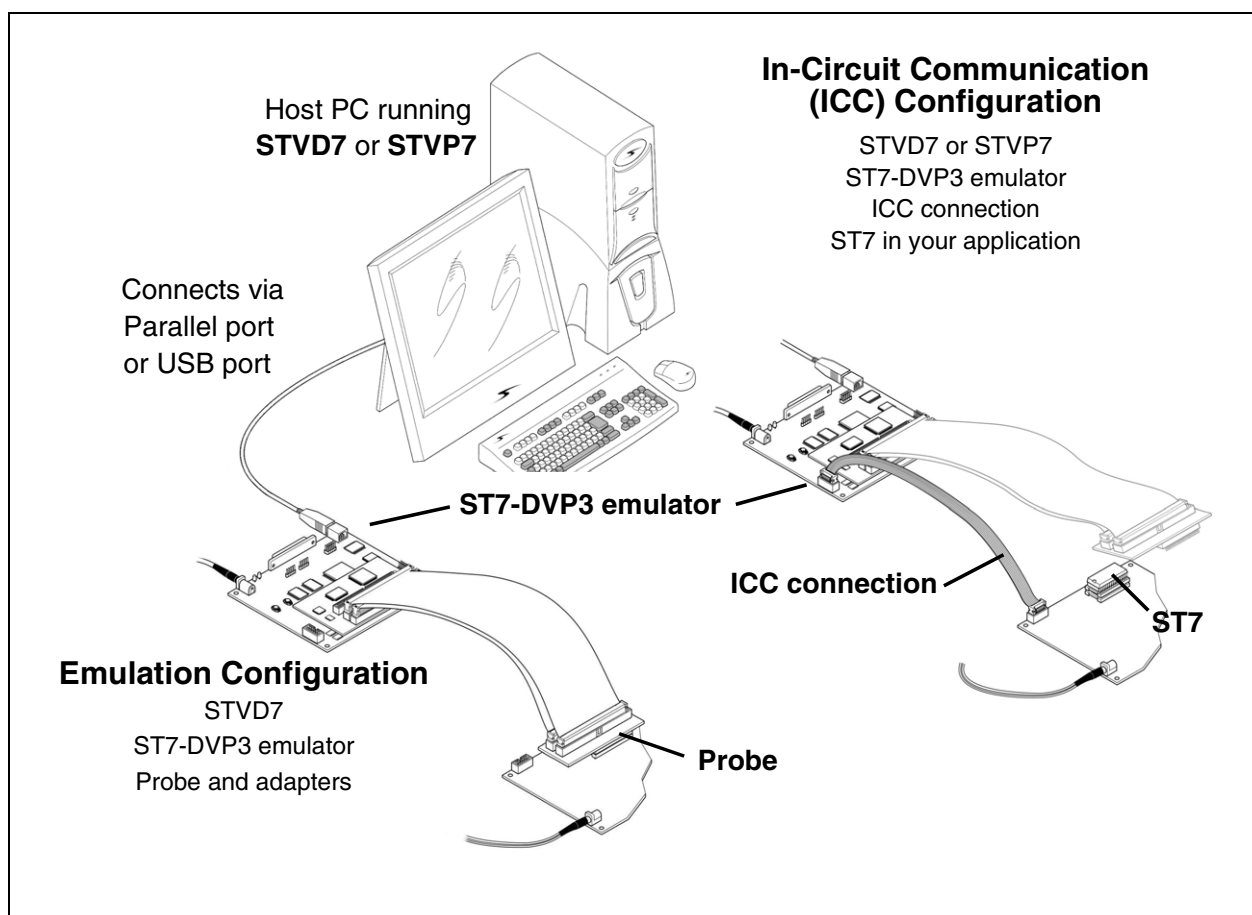


Figure 1: ST7-DVP3 emulator configurations

1.1 About the user manuals...

This manual will help you set up your ST7-DVP3 emulator and connect it to your PC. Here, you will find:

- Quick set up instructions for the emulation and ICC configurations
- Detailed hardware information
- A trouble shooting guide for your development kit

For information about the hardware and software intended for use with your development kit, refer to the following documents that are included with it:

STVD7 Visual Develop online help - build and debug your application software

ST7 Visual Programmer online help - program your MCU

ST7xxxx-DVP3 Probe User Guide - connect the TEB to your application board

ST7xxxx Datasheet - includes information about emulation and ICC connection that are specific to your MCU

1.1.1 Revision history

Date	Revision	Description
Nov 2002	1.1	• Updated USB port configuration information, Section 3.2.
Dec 2003	1.2	• Removed STVD7 and STVP7 software installation and use instructions. • Added quick set up instructions, Section 2.2 and Section 2.3.
Nov 2004	1.3	• Added support of in-circuit debugging, Section 1 and Section 5. • Added revision history table, Table 1. • Updated Section 3 to align menu references and command sequences with STVD7 3.0. • Added in-circuit communication (ICC) connection requirements for application boards, Section 5.2. • Added note regarding Hardware test failure due to changes in target device memory mapping, Section C.3.

Table 1: ST7-DVP3 User Manual Revision History

1.2 Host PC system requirements

Both hardware and software components of the ST7-DVP3 emulator have been designed to work with PCs meeting the following requirements:

- One of the following operating systems: Microsoft® Windows® 98, 2000, Millennium, NT® or XP®.
- Intel® Pentium (or compatible) processor with minimum speed of 133 MHz.
- Minimum RAM of 32 MB (64 MB recommended).
- 50 MB of free hard disk space to install all of the ST7 tools.

Note: Windows® 2000, NT® and XP® users must have administrator privileges to install STVD7.

1.3 Getting assistance

For more information, application notes, FAQs and software updates on all the ST microcontroller families, check out the CD-ROM or our website:

mcu.st.com

For assistance on all ST microcontroller subjects, or if you need help with using your development kit, use the contact list provided in [Product Support](#) on page 39. We'll be glad to help you!

2 GETTING STARTED WITH ST7-DVP3

The ST7-DVP3 emulator can be configured for emulation or in-circuit programming (ICP) and in-circuit debugging of your ST7. To help you get started, the following sections provide:

- [Section 2.1](#) — a check list of components included in your kit
- [Section 2.2](#) — quick set up instructions for the emulation configuration
- [Section 2.3](#) — quick set up instructions to in-circuit debug and in-circuit program in the ICC configuration

2.1 Delivery checklist

The ST7-DVP3 emulator is delivered with (refer to [Figure 2](#)):

- 1 The **ST7-DVP3 development board**, which consists of one DVP3 Main Emulation Board (MEB) mounted with the Target Emulation Board (TEB) corresponding to your ST7 microcontroller
- 2 One DC power supply, one ferrite clip and three power supply plug extensions for standard North American, continental European and UK power outlets
- 3 One parallel port cable with ferrite bead to connect the emulator to your PC
- 4 One USB cable to connect the emulator to your PC
- 5 One ICC cable for in-circuit communication connections
- 6 One passive probe with the device adapters and cables needed to connect your ST7-DVP3 emulator to your application board (for details refer to the *ST7xxx-DVP3-Probe User Guide* provided).

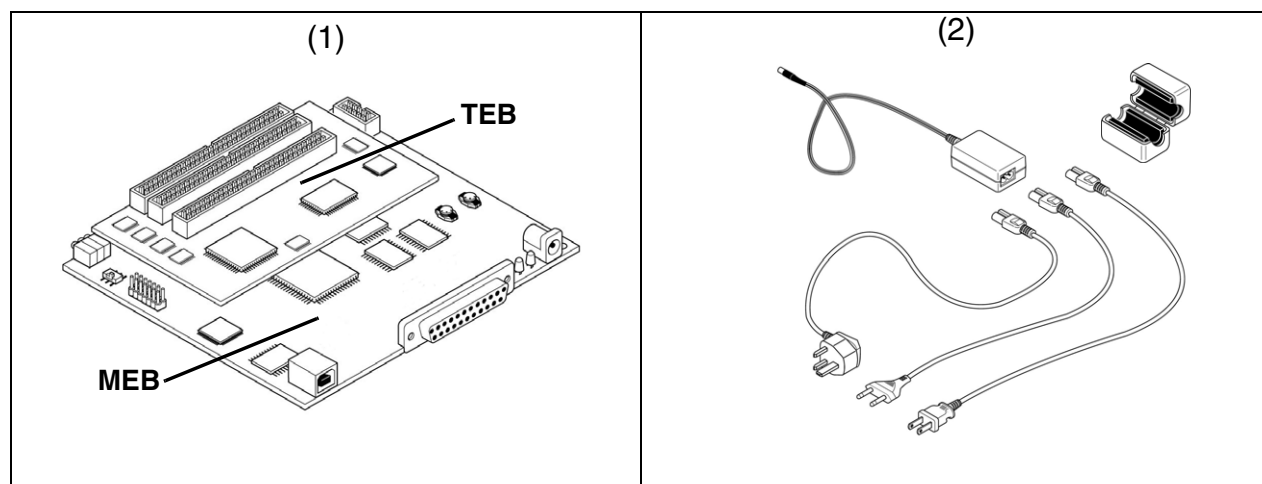


Figure 2: Parts delivered with the ST7-DVP3 emulator (not to scale)

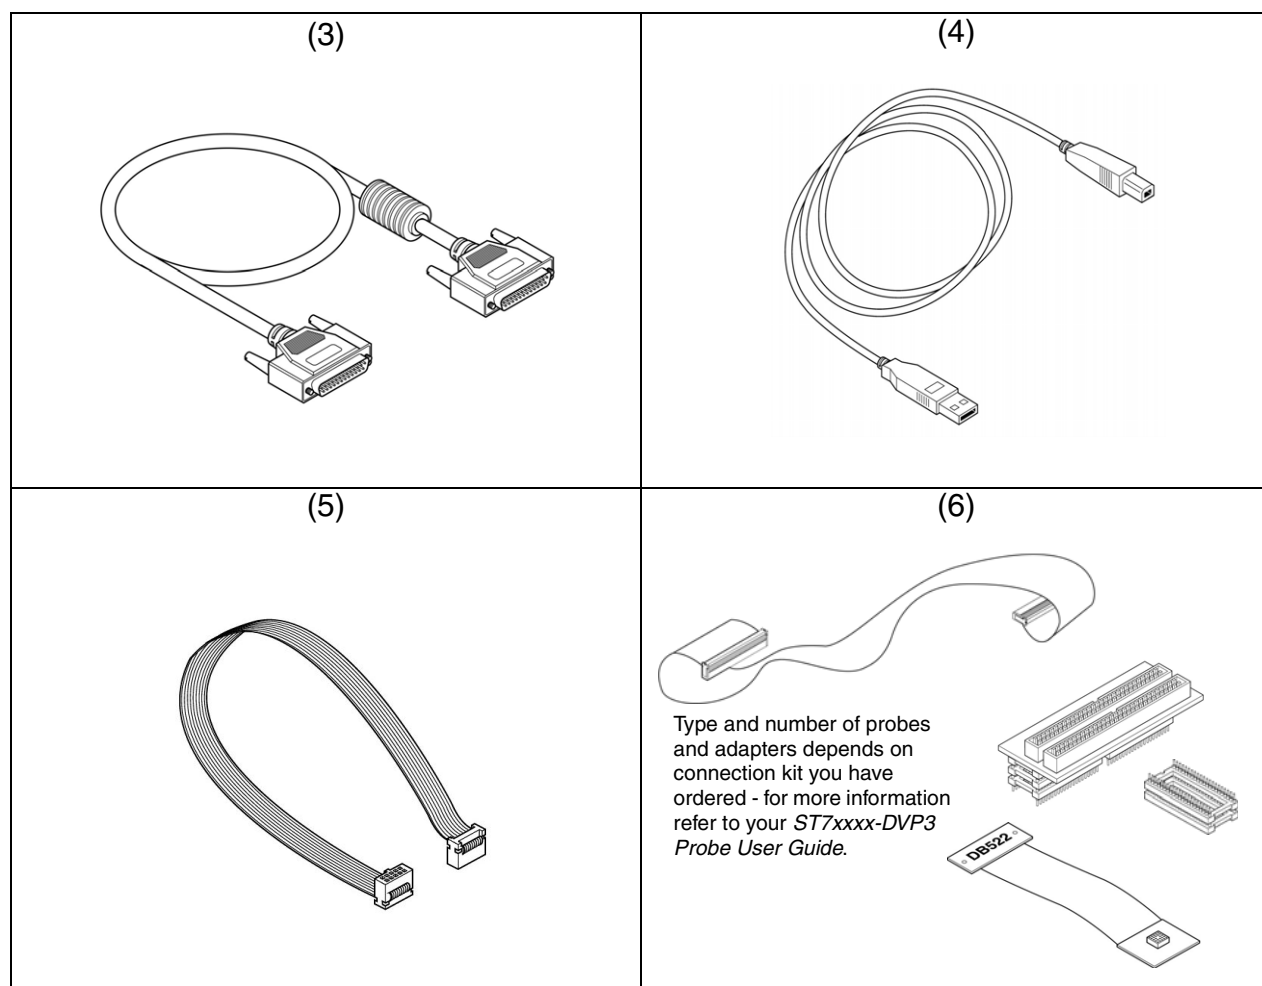


Figure 2: Parts delivered with the ST7-DVP3 emulator (not to scale)

All ST7-DVP3 emulators come with the following documentation.

- This manual.
- *ST7xxx-DVP3 Probe User Guide*, specific to the type of ST7-DVP3 emulator you have ordered
- ST7 ASM Quick Reference Guide
- ST Product and Tool Selection Guide
- The “**Microcontroller Development Tools**” CD-ROM, with all the software you need to run your ST7-DVP3 emulator, including:
 - The ST7 Visual Develop (STVD7) software , which includes an online help file to get you started.
 - The ST7 Visual Programmer (STVP7) software, which includes an online help file to get you started.

- The ST7 Assembler-Linker software with user manual in Adobe® Acrobat® PDF format.
- Software demonstration packages, including C compilers and toolchains by Cosmic and Metrowerks.
- The “ST Microcontrollers Mini-ROM” with a presentation of the ST7 family of microcontrollers.

2.2 Quick set up for emulation configuration

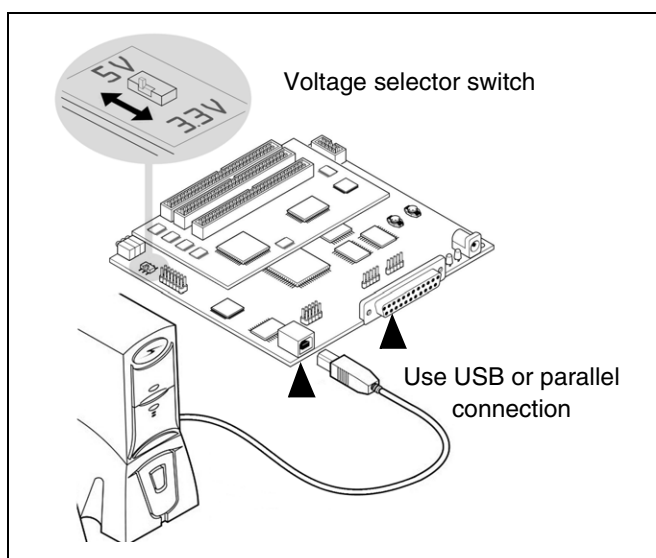


Figure 3: Connect your PC

Caution: Before making hardware connections, ensure that both the emulator and your application board are powered OFF

STEP 3: Plug the flat cables into the connectors on the TEB. Connect the probe to your application in place of your MCU.

For detailed instructions refer to your *ST7xxx-DVP3 Probe User Guide*.

STEP 4: Connect the ferrite clip to the power supply cord between the power supply and your emulator.

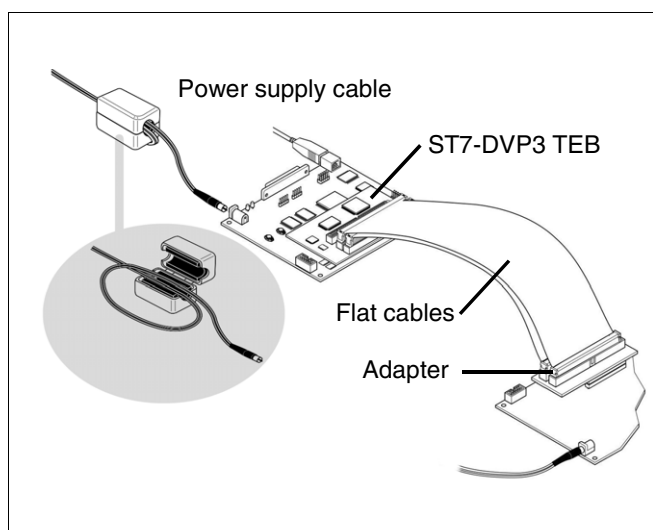


Figure 4: Connect your application

Warning: Never power on your application board while your emulator is powered off—this can seriously damage your emulator. When powering up, always turn on your emulator first. When powering off, always power off your application first.



STEP 5: Connect the power supply to your ST7-DVP3 emulator. For more information, refer to [Section 4.3.2: Power supply](#) on page 17.

STEP 6: Power up your ST7-DVP3 emulator.

STEP 7: Power up your application.

2.3 Quick set up for ICC configuration

STEP 1: Connect your emulator to your host PC via parallel or USB port, as shown in [Figure 3](#). For more details about PC connection, refer to [Chapter 3: Connectivity](#) on page 12.

Warning: Never have an application running when you set the operating voltage. Setting it to 3.3V while an application is running at 5V can seriously damage the emulator.



STEP 2: Switch the ST7-DVP3 emulator to the selected operating voltage, either 3.3V or 5V, as shown in [Figure 3](#).

Note: In order to use the ICC connection, you must design your application board with an HE10 connector linked to your target microcontroller. The pins connected to the HE10 connector must use a signal voltage of 3.3 or 5 V. For more information refer to [Section 5.2: ICC connection](#) on page 24.

STEP 3: To connect to the target MCU, plug the ICC cable into the ICC connector on the ST7-DVP3 emulator and the HE10 connector on your application board.

STEP 4: Connect the ferrite clip to the power supply cord between the supply and your ST7-DVP3 emulator.

STEP 5: Connect the power supply to your emulator. For power supply information, refer to [Section 4.3.2: Power supply](#) on page 17.

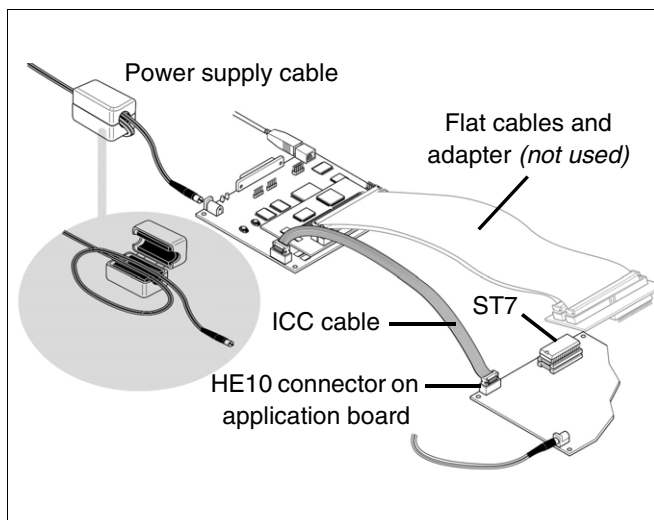


Figure 5: Connect your application

Warning: Never power on your application board while your emulator is powered off—this can seriously damage your emulator. When powering up, always turn on your emulator first. When powering off, always power off your application first.



STEP 6: Power up your ST7-DVP3 emulator.

STEP 7: Power up your application.

3 CONNECTIVITY

The ST7-DVP3 emulator provides two possible connections to the host PC: parallel and USB port.

When you start your emulation or programming sessions, you will have to set the connection type in STVD7 or STVP7. In STVD7, set the port in the **Debug Instrument Settings** window (*Debug Instrument>Target Settings*). When programming your ST7 with STVP7, set the port in the **Configuration** window (*Configure>Configure ST7 Visual Programmer*). For more information refer to your software's online help.

The following sections provide you with information about supported connections, as well as how to connect your PC via:

- [Section 3.1](#) – Parallel port
- [Section 3.2](#) – USB port

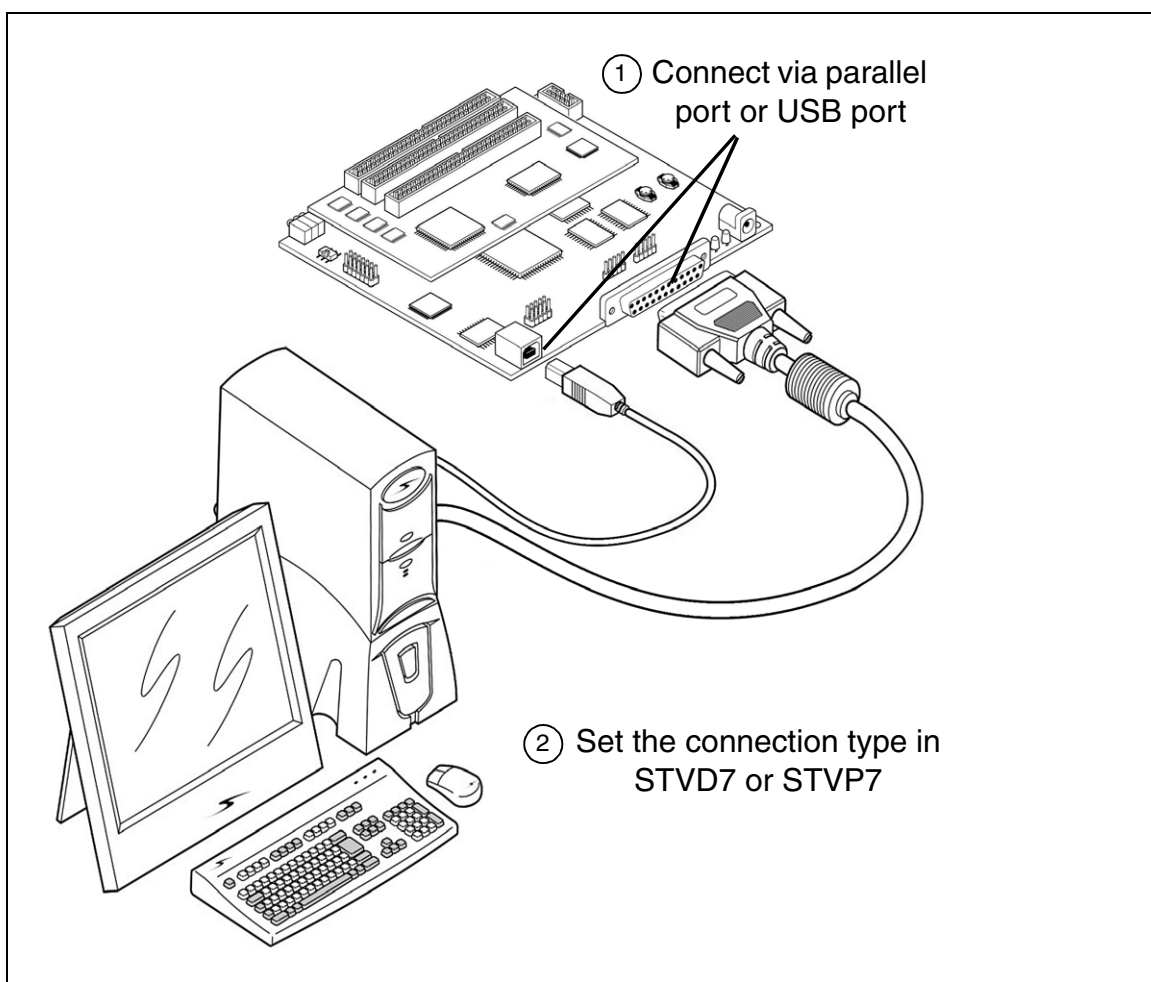


Figure 6: Parallel and USB port connections

3.1 Parallel port

Your ST7-DVP3 emulator supports the parallel port connection modes listed in [Table 2](#), for the emulation and the in-circuit communication configurations.

Configuration	Operating Systems	Compatible Parallel Port Modes
Emulation, In-circuit Communication	Windows [®] 98, Millennium, NT [®] 4, 2000, XP [®]	ECP ¹ , Bidirectional, Compatible, SPP, Nibble, Centronics or EPP.

Table 2: Supported parallel port connection modes

1) *ECP mode is normally chosen as a default mode as it provides the best performance.*

3.1.1 Connecting to the parallel port

To connect your ST7-DVP3 emulator to your PC, connect one end of the parallel cable to your development kit's 25-pin SUB-D connector (see [Figure 6](#)). Connect the other end of the parallel cable to one of the PC's parallel ports (LPT1 or LPT2). Be sure to use the parallel cable provided with your emulator. Using a longer parallel cable may cause emulator malfunctions. The use of switch boxes between your PC's parallel port connector and the emulator is not recommended.

3.1.2 Changing the parallel port set up

Under certain circumstances, you may receive the following error message:

```
"Connection Error (LPT1/LPT2): Interconnection failure.
Verify your input/output cable."
```

This may mean that the setup of the LPT1 or LPT2 port on your PC is not compatible with your emulator. To set up the port correctly:

- 1 Shut down and restart your PC in order to enter the BIOS setup.
- 2 Follow the messages displayed on the screen and when prompted, press the key required to enter the BIOS setup (usually a function key or the ESC key).
- 3 Select the parallel ports menu. (This may be listed under I/O ports.)
- 4 Change the Mode of the LPT port that you have chosen for your emulator (i.e. either LPT1 or LPT2) to one of the compatible modes listed in [Table 2](#) on page 13.
- 5 Save your changes and exit the BIOS setup.

3.2 USB port

Your ST7-DVP3 emulator supports USB connection in both the emulation and in-circuit communication configurations, when using Windows[®]98, Millennium, 2000 and XP[®].

3.2.1 Connecting to the USB port

For USB port connections, plug the USB cable into the emulator's USB port (as shown in [Figure 6](#)) and connect the other end into the PC's USB port. Once connected and powered-on for the first time, your PC will automatically look for a USB device driver.

4 EMULATION CONFIGURATION

In the emulation configuration, the ST7-DVP3 emulator provides you with a range of emulation features to make building and debugging your application fast and easy.

The following sections provide information about the emulation configuration, including descriptions of:

[Section 4.1](#) — general emulation features

[Section 4.2](#) — system architecture

[Section 4.3](#) — hardware features

[Section 4.4](#) — changing configurations

[Section 4.5](#) — product limitations and discrepancies

4.1 Overview of emulation features

The features described below are common to all ST7-DVP3 emulators.

- Link to host PC possible via parallel port or USB port
- Emulator status indicator LEDs
- 512 record trace with filter capability
- One input trigger, which can be recorded in the trace
- One output trigger
- Three analyzer probe input pins, which can be recorded in the trace
- External clock sourcing

4.2 System architecture

The ST7-DVP3 emulator is composed of the following elements:

- **ST7 Visual Develop (STVD7)** software runs on your host PC, allowing you to configure and control your emulator, and debug your application.
- The **Main Emulation Board (MEB)** is the hardware component that provides the communication links between the host PC and the ST7xxx-DVP3 TEB. The MEB connects to the host PC through either USB or parallel port connection, and is powered by an external power supply.
- The **Target Emulation Board (TEB)** is the hardware component that contains the emulation firmware needed to emulate a family of MCUs. It also permits the connection to your application board (see *ST7xxx-DVP3 Probe User Guide*).
- **Adapters and connectors** allow you to connect your emulator to your application board in place of your ST7 microcontroller (see *ST7xxx-DVP3 Probe User Guide*).

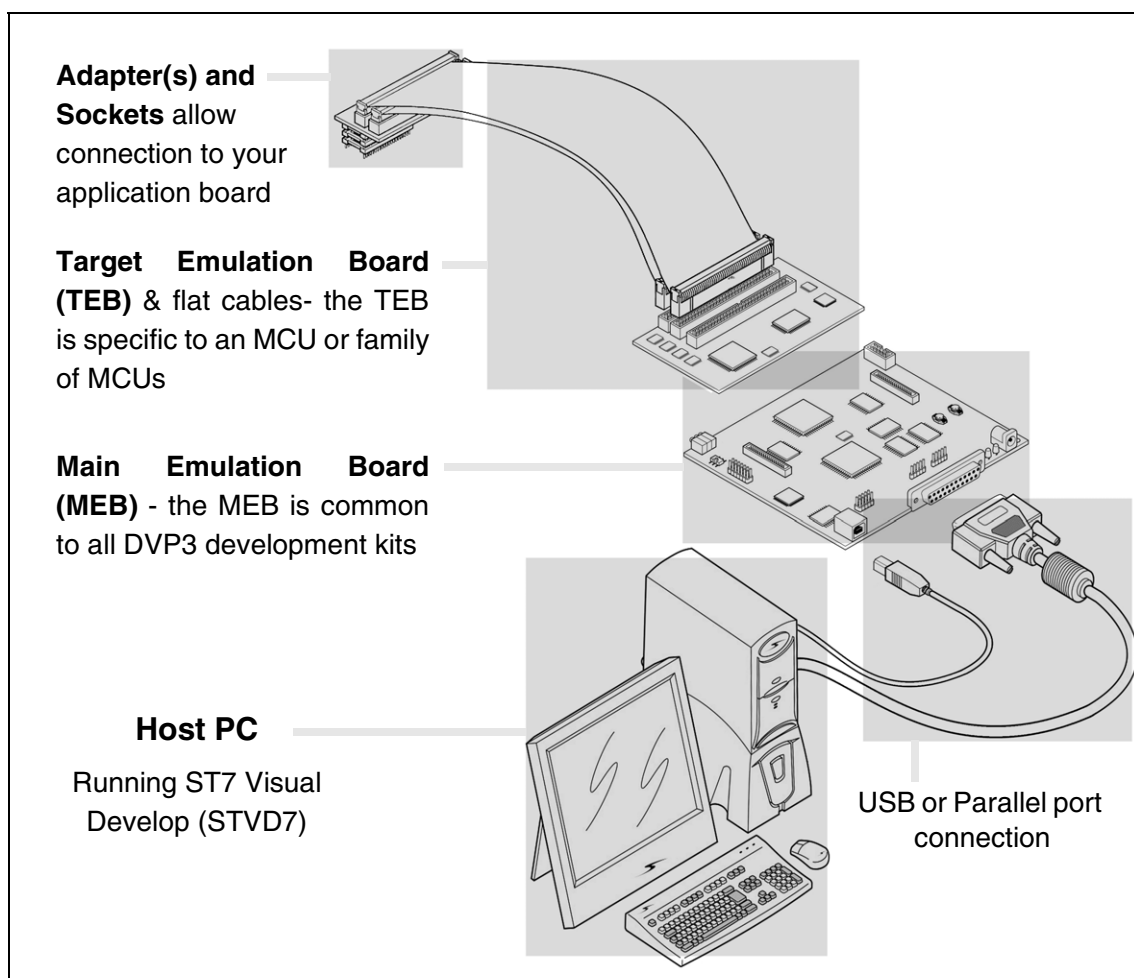


Figure 7: Emulation configuration

4.3 Hardware features

While target emulation boards will vary from one version to another, all ST7-DVP3 development boards offer some standard features that will help you debug your application, including voltage selection, analyzer probe input pins, input/output triggers and external clock connection. These features and common characteristics of the ST7-DVP3 development board are described in this section.

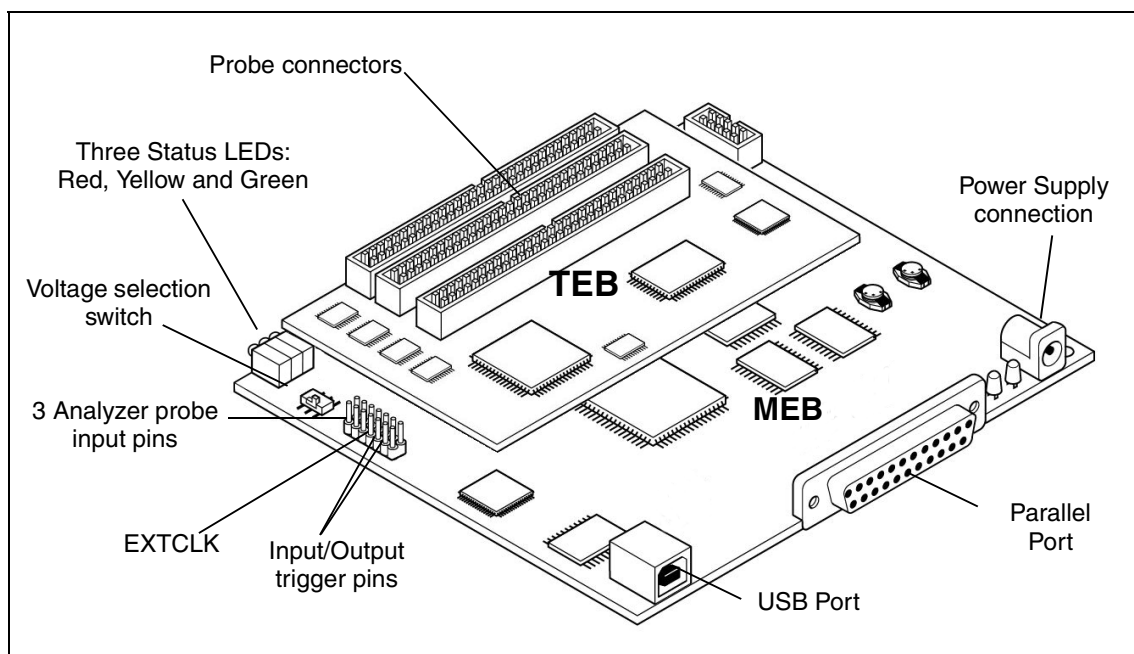


Figure 8: General layout of ST7-DVP3

4.3.1 Emulation status LEDs

There are three LEDs on the ST7-DVP3 development board, which indicate emulator status during debugging (see [Figure 8](#)):

- **Reset (Red)** — indicates that the emulator is being reset, or flashes slowly when the emulator is in *Wait for Interrupt* mode.
- **Halt (Yellow)** — indicates when the emulation chip is in *Halt* mode.
- **Run (Green)** — indicates when the emulator is running your application.

4.3.2 Power supply

The emulator's power supply plugs into the power supply connector on the MEB (see [Figure 8](#)). When you connect the power supply, be sure to:

- 1 Ensure that the operating voltage of the ST7-DVP3 emulator (110 Volts/ 220 Volts) matches that which is indicated on the label of your power supply. Contact your dealer if this voltage does not correspond to your mains.
- 2 Install the provided ferrite clip on the cord running between the emulator and the power supply, approximately 10 cm from your emulator (see [Figure 9](#)).

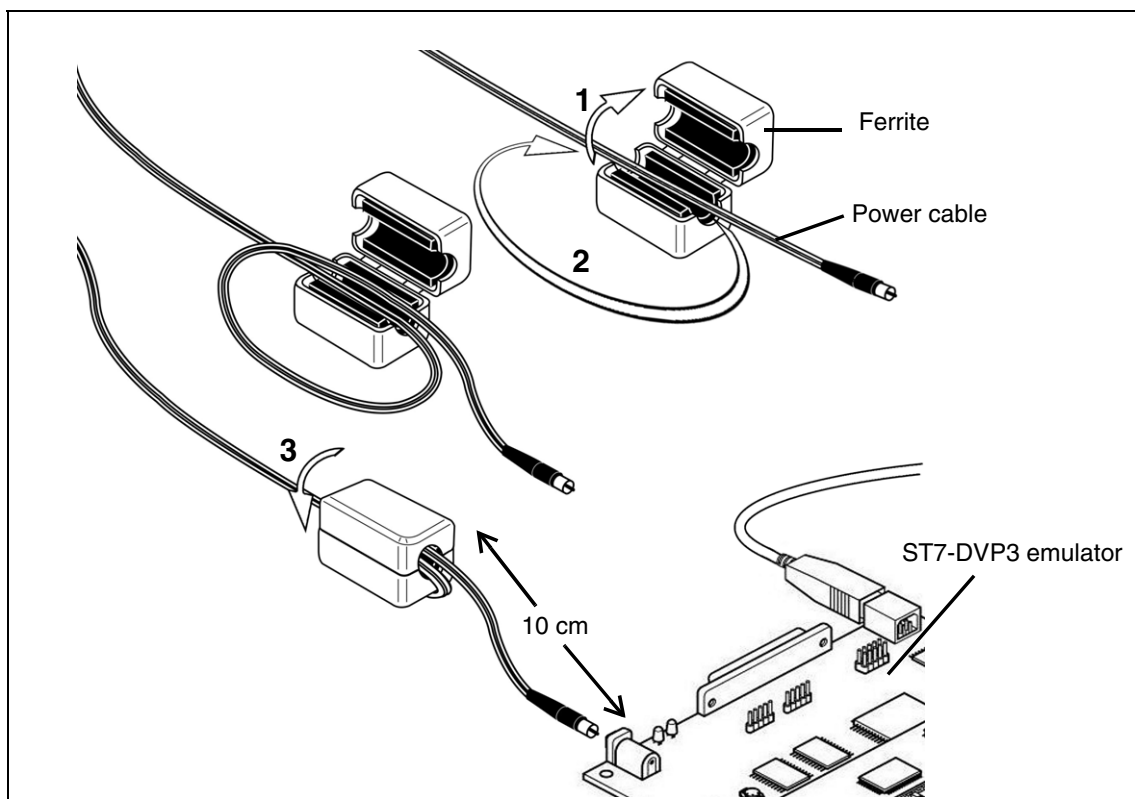


Figure 9: Connecting the ferrite clip

- 3 Plug the power supply into the mains using the supply cable provided.

4.3.3 Application voltage selector switch

Before you connect your application board to your emulator, you must set the operating voltage to that which corresponds to the designed operating voltage of your application board. This is done with the voltage selector switch. The switch is located on the main emulation board near the status LEDs (see [Figure 8](#)). It allows you to select an operating voltage of either 3.3V or 5V.

Caution: Failure to select the correct voltage for your application board can result in damage to your emulator or your application board.

4.3.4 Input and output triggers

There are two trigger pins on the ST7-DVP3 development board, TRIGOUT and TRIGIN (see [Figure 8](#)), that permit you to send and receive trigger signals. This capability will help you ensure that the ST7 microcontroller's activities are well-synchronized with other devices in your application. With STVD7, these triggers allow you to:

- Generate a break in the execution of your application. When combined with trace recording, it is possible to track the sequence of events that precede and follow the reception of an external signal.
- Generate an output trigger signal to be sent upon the occurrence of a hardware event. Hardware events are explained in detail in the *STVD7 User Manual*. Trace recording can also be synchronized around a hardware event.

4.3.4.1 Hardware events and the external output trigger (TRIGOUT)

The ST7-DVP3 development board features a TRIGOUT pin from which a signal can be sent out. See [Figure 8](#) for the location of the TRIGOUT pin.

The sending of trigger signals is controlled by hardware events. There are three types of hardware event:

- **Event On (EVT_ON):** Upon a memory read or write at a specified address, or the occurrence of specified variable, the trigger output signal is set high. You can also choose to have trace recording begin simultaneously.
- **Event Off (EVT_OFF):** Upon a memory read or write at a specified address, or the occurrence of specified variable, the trigger output signal is set low. You can use this to end trace recording.
- **Event Hit (EVT_HIT):** Upon a memory read or write at a specified address, or the occurrence of specified variable, the trigger output signal is set high for the cycles in which one particular address is accessed.

Figure 10 shows how the output trigger signal can be controlled using the above hardware event type.

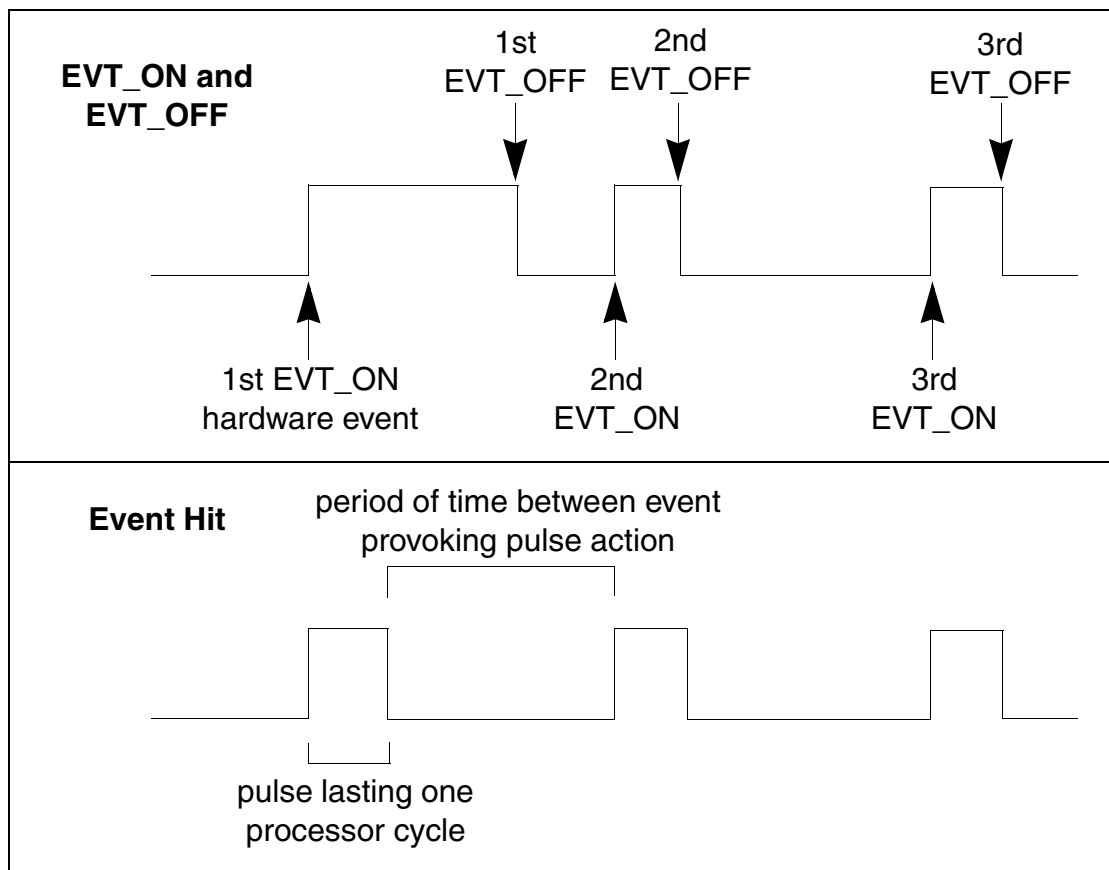


Figure 10: Output trigger action modes

For information on how to insert hardware events, refer to the *STVD7 User Manual*.

4.3.4.2 Input trigger (TRIGIN)

The ST7-DVP3 development board provides a special inlet, TRIGIN, that can be used to transmit a signal to stop the execution of your application upon the occurrence of an external event (***Break on TRIGIN***). With this feature, the reception of a rising edge signal from the TRIGIN pin stops the program after the execution of the current instruction.

A schematic diagram is shown below:

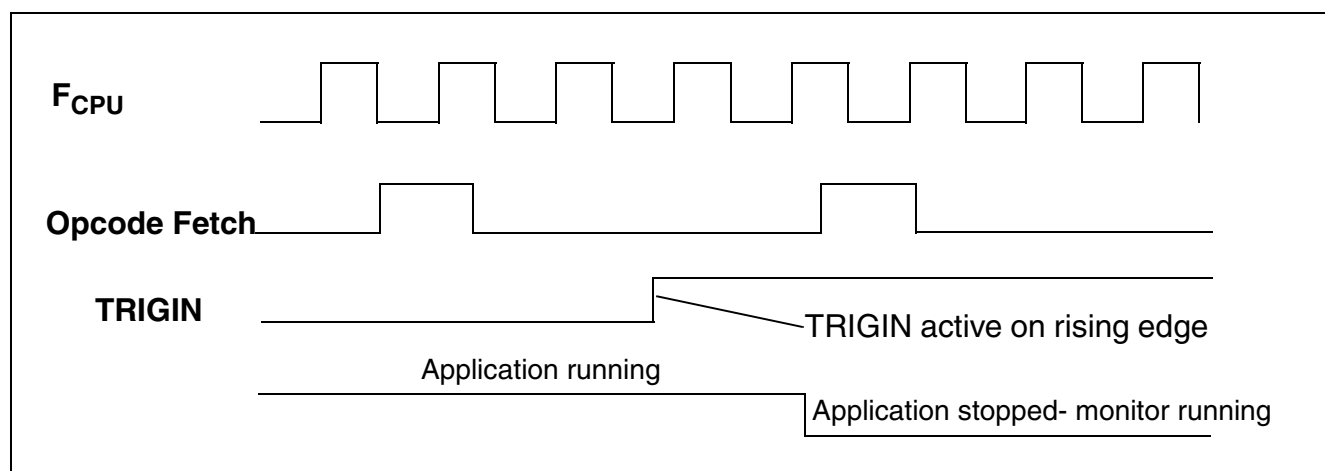


Figure 11: TRIGIN signal

4.3.5 External clock connection

The ST7-DVP3 development board provides an external clock connection, labelled EXTCLK (see [Figure 8](#)). If your ST7 microcontroller application requires the use of a clock external to the microcontroller, you should connect the external clock to this pin.

4.3.6 Analyzer input connections

The ST7-DVP3 development board provides three analyzer probe input connections (PROBE 0, 1 and 2). These connectors allow you to use external signals (TTL level), coming either from your application or another external device, while debugging your application. These signals can be recorded in the trace.

4.4 Changing configurations

Your ST7-DVP3 emulator is designed to connect to your application board either in place of your ST7 via the probe (TEB, flat cables, adapters and socket), or the ICC connection which is relayed to the ST7 on your application board. For more information about the probe connection, refer to your *ST7xxxx-DVP3 Probe User Guide*.

When using your emulator you must only use one connection at a time. If you switch from one connection to another, follow the procedure outlined below.

Switching from probe connection to the ICC connection

- 1 Switch off the application board.
- 2 Disconnect the power to the ST7-DVP3 development board.
- 3 Unplug the probe from your application board.
- 4 Install the target MCU in its socket on the application board.
- 5 Plug one end of the ICC cable into the ICC connector on your ST7-DVP3 development board, and plug the other end into the HE10 connector on your application board.
- 6 Reconnect the power supply for the ST7-DVP3 development board.
- 7 Switch on the power for the application board.

4.5 Emulator functional limitations and discrepancies

4.5.1 Limitations and discrepancies for specific MCUs or families of MCUs

Specific MCUs of families of MCUs may present certain limitations or discrepancies. You will find information about these specific limitations in STVD7's **Discrepancies window**. For more information refer to the *STVD7 User Manual*.

5 IN-CIRCUIT COMMUNICATION CONFIGURATION

In the in-circuit communication configuration, the ST7-DVP3 emulator provides the capability to to debug your application as it runs on your ST7 and program your application to the ST7 soldered on your application board. The following sections provide information about:

[Section 5.1](#) — System architecture

[Section 5.2](#) — ICC connection

[Section 5.3](#) — Changing configurations

5.1 System architecture

The ST7-DVP3 emulator comes equipped with an In-Circuit Communication (ICC) connector and ICC cable that allows you to take advantage of the ICC protocol for in-circuit debugging (ICD) and in-circuit programming (ICP) on ST7s with Flash memory. In conjunction with ST7 Visual Develop (STVD7) software, the ICC connection makes it possible to debug your application while it runs on your ST7. Then using STVD7, or ST7 Visual Programmer (STVP7), you can program your final, optimized application to the ST7 on your application board (see [Figure 12](#)).

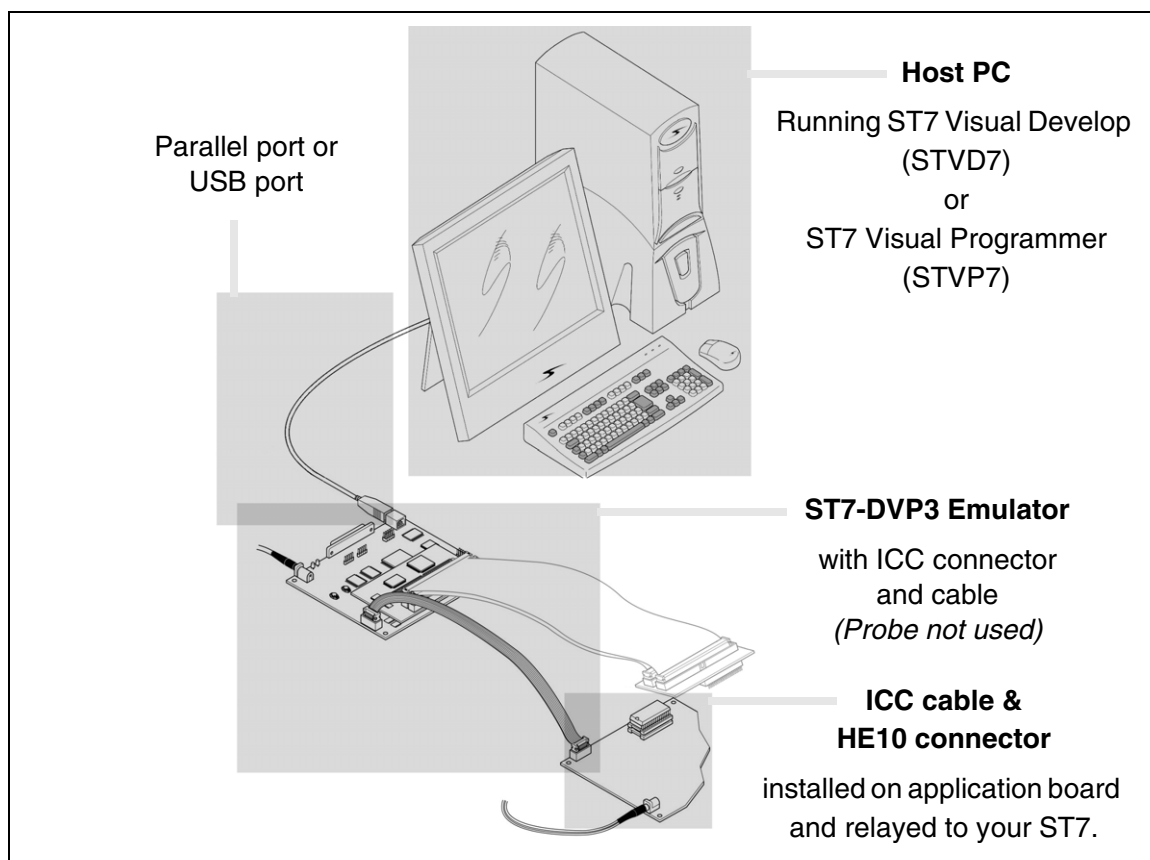


Figure 12: ICC configuration


During application development, STVD7 software running on your PC provides an integrated development environment that allows you to debug your application while it runs on an ST7 that has Debug Modules. To determine if your ST7 has core debug modules, refer to your ST7xxxx Datasheet. For more information about in-circuit debugging with STVD7, refer to the STVD7 online help provided with your software package.

Once you've finalized your application, STVP7 software provides a graphical interface for verifying memory sectors, checking the settings of the option bytes and programming your ST7. For more information about programming with STVP7, refer to the STVP7 online help provided with your software package. For more information about ICC protocol related to your ST7 MCU, you can refer to your *ST7xxxx Datasheet*.

5.2 ICC connection

To take advantage of ICC, you must integrate an ICC connector into your application hardware when you start developing your application. To help you implement ICP and ICD in the development of your application, this section provides a summary of points you should consider when installing an ICC connector.

To connect to your application board for ICP and ICD, you need to install a 10-pin, HE-10 type connector (also called an ICC Connector) and ensure the appropriate connections to your ST7. This connector receives the ICC cable and relays the signals required for ICP and ICD to your ST7.

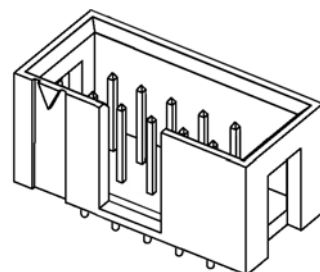

Using the ICC protocol requires that a minimum of 4 and as many as 6 pins of your ST7 be relayed to the ICC Connector. These connection requirements are illustrated in [Figure 13](#), below and summarized in [Figure 3](#).

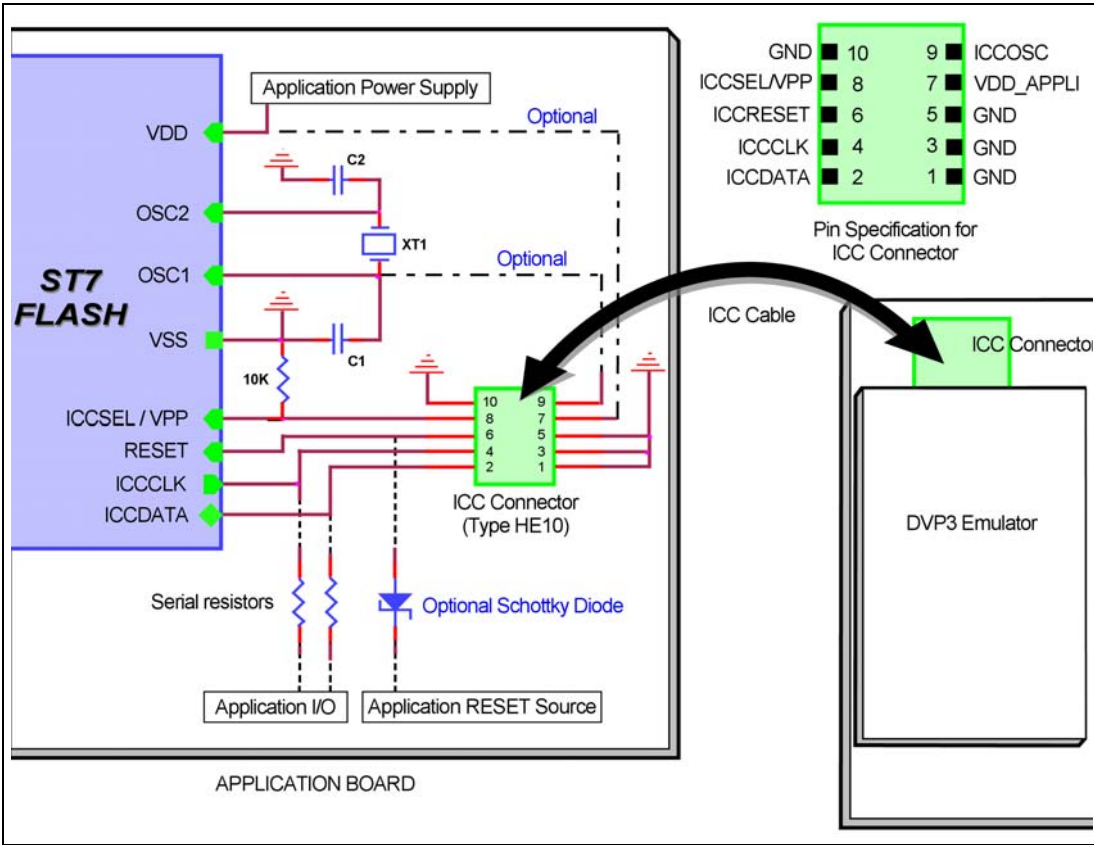


Figure 13: ICC interface

ST7 Pin	Function	Connects to ICC connector pin...
ICCDATA	ICC input/output serial data pin	ICCDATA
ICCCLK	ICC input serial clock pin	ICCCLK
RESET	Device reset	ICCRESET
ICCSEL/VPP	Programming voltage	ICCSEL/VPP
OSC1 or OSCIN	Main clock input for external	ICCOSC
VDD	Device power supply	VDD_APPLI (not connected)
VSS	Device power supply (ground)	GND

Table 3: ICC connection requirements

Isolation of ICCDATA and ICCCLK pins

As soon as the DVP3's ICC connector is connected to the application board, the ICCDATA and ICCCLK pins must not be used by other application devices, even if an ICC session is not in progress. If the application uses these pins as inputs, isolation such as a serial resistor must be implemented to prevent other application devices from forcing a signal on either of these pins. The application board must not drive current in excess of 1mA.

If the ICCDATA and ICCCLK pins are only used as outputs by the application, no signal isolation is necessary.

For ST7 without an ICCSEL pin, during normal operation the ICCCLK pin must be pulled-up internally or externally (10K Ω pull-up required in noisy environments). This is to avoid entering ICC mode unintentionally during a reset.

Isolation of the RESET pin

During an ICC session, you must ensure that the emulator controls the ST7's RESET pin so that no external reset is generated by the application. This can lead to a conflict if the application reset circuitry signal exceeds 5mA (push-pull output or pull-up resistor <1K). To avoid such conflicts, a Shottky diode can be used to isolate the application reset circuit.

ICCSEL/VPP pin

The application pull-down resistor must not be lower than 10k Ω .

ICCOSC pin

The ICCOSC pin of the ICC connector must be connected to the ST7's OSC1 or OSCIN pin if the clock is not provided by the application, or if the application clock source is not programmed in the option byte. This connection allows you start communication with your ST7 for in-circuit debugging using the **Start with External Clock (Ignore Option Bytes)** option in STVD7, or for in-circuit programming using the **ICP OPT Disable** mode in STVP7 or STVD7. When doing so, your emulator provides a clock source to initiate communication with the ST7. Your ST7-DVP3 emulator provides a clock source at a frequency of 8 MHz.

For ST7 devices with multi-oscillator capability, when the ICCOSC pin is connected, the OSC2 pin should be grounded.

If your application provides a clock signal and you are certain that it is correctly programmed in the ST7's option byte, then it is not necessary to use the **Start with External Clock (Ignore Option Bytes)** option when you start ICD in STVD7. When starting ICP, you can use the **ICP OPT Enable** mode in STVP7 or STVD7.


In this case, your application clock source provides the clock signal for initiating communication with your ST7 and ICCOSC is not connected to your ST7.

VDD_APPLI pin

This pin is not connected. It is only used with tools that have a power supply follower.

ICC cable

Your ST7-DVP3 emulator includes an ICC cable for connecting to the ICC connector on your application board. The provided cable is 30cm long, however you can use a cable up to 2 meters long. Typical characteristics for provided ICC cable are shown in [Table 4](#), below.

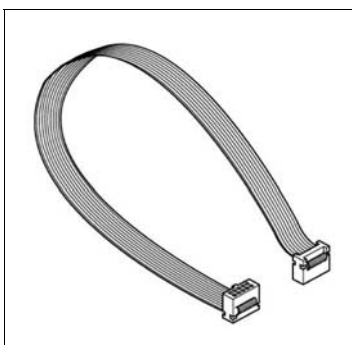

Pitch	1.27 mm
Section	0.09mm ²
Impedance	100 Ohms
Nominal Voltage	300V
Max. Current	1A
Temperature	-10°C to +105° C

Table 4: Typical ICC cable characteristics

5.3 Changing configurations

Your ST7-DVP3 emulator is designed to connect to your application board either in place of your ST7 via the probe (TEB, flat cables, adapters and socket), or the ICC connection which is relayed to the ST7 on your application board. For more information about the probe connection, refer to your *ST7xxxx-DVP3 Probe User Guide*.

When using your emulator you must only use one connection at a time. If you switch from one connection to another, follow the procedure outlined below.

Switching from ICC connection to the probe connection

- 1 Switch off the application board.
- 2 Disconnect the power to the ST7-DVP3 emulator.
- 3 Unplug the ICC cable from the HE10 connector on your application board.
- 4 Remove the MCU from its socket on the application board.
- 5 Connect the probe to your application board in place of your target MCU.

- 6 Reconnect the power supply for the ST7-DVP3 emulator.
- 7 Switch on the power for the application board.

APPENDIX A EMC CONFORMITY AND SAFETY REQUIREMENTS

This product respects the EMC requirements of the European guideline 89/336/EEC under the following conditions:

- Any tester, equipment, or tool used at any production step, or for any manipulation of semiconductor devices, must have its shield connected to ground.
- All provided ferrites must be attached as described in the hardware installation instructions of the relevant user manual(s).
- The product must be placed on a conductive table top, made of steel or clean aluminum, or covered by an antistatic surface (superficial resistivity equal to or higher than $0.5 \text{ M}\Omega/\text{cm}^2$), grounded through a ground cable (conductive cable from protected equipment to ground isolated with a $1 \text{ M}\Omega$ resistor placed in series). All manipulation of finished must be done at such a grounded worktable.
- The worktable must be free of all non-antistatic plastic objects.
- An antistatic floor covering grounded through a conductive ground cable (with serial resistor between 0.9 and $1.5 \text{ M}\Omega$) should be used.
- It is recommended that you wear an antistatic wrist or ankle strap, connected to the antistatic floor covering or to the grounded equipment.
- If no antistatic wrist or ankle strap is worn, before each manipulation of the powered-on tool, you must touch the surface of the grounded worktable.
- It is recommended that antistatic gloves or finger coats be worn.
- It is recommended that nylon clothing be avoided while performing any manipulation of parts.
- If you are using this product under conditions where there may be blackouts or power surges (such as during an electrical storm), it is recommended that you isolate it by elevating it at least 10 cm above the grounded work surface using blocks of insulating material.

APPENDIX B: CHANGING THE TEB

ST7-DVP3 emulators have a modular design that is based on two emulation boards. The **Main Emulation Board (MEB)** is identical for all ST7-DVP3 emulators. The **Target Emulation Board (TEB)** is specific to an ST7 or a family of ST7 microcontrollers. Modifying any ST7-DVP3 emulator requires changing the TEB and obtaining the Adapter kit that is specific to the target ST7's package.

In order to replace your ST7-DVP3 TEB on your emulator, follow this procedure:

- 1 Ensure that the ST7-DVP3 emulator is powered off. When powering off, shut down any connected application, then power off the development board. Disconnect the power supply from your development board.
- 2 Remove the two nuts that secure the TEB to the MEB, as shown in [Figure 14](#).
- 3 Place your fingers between the TEB and the MEB along the edges that are parallel to the J5 and J6 connectors. Lift up on the TEB, while leveraging against the MEB, until the two boards separate.

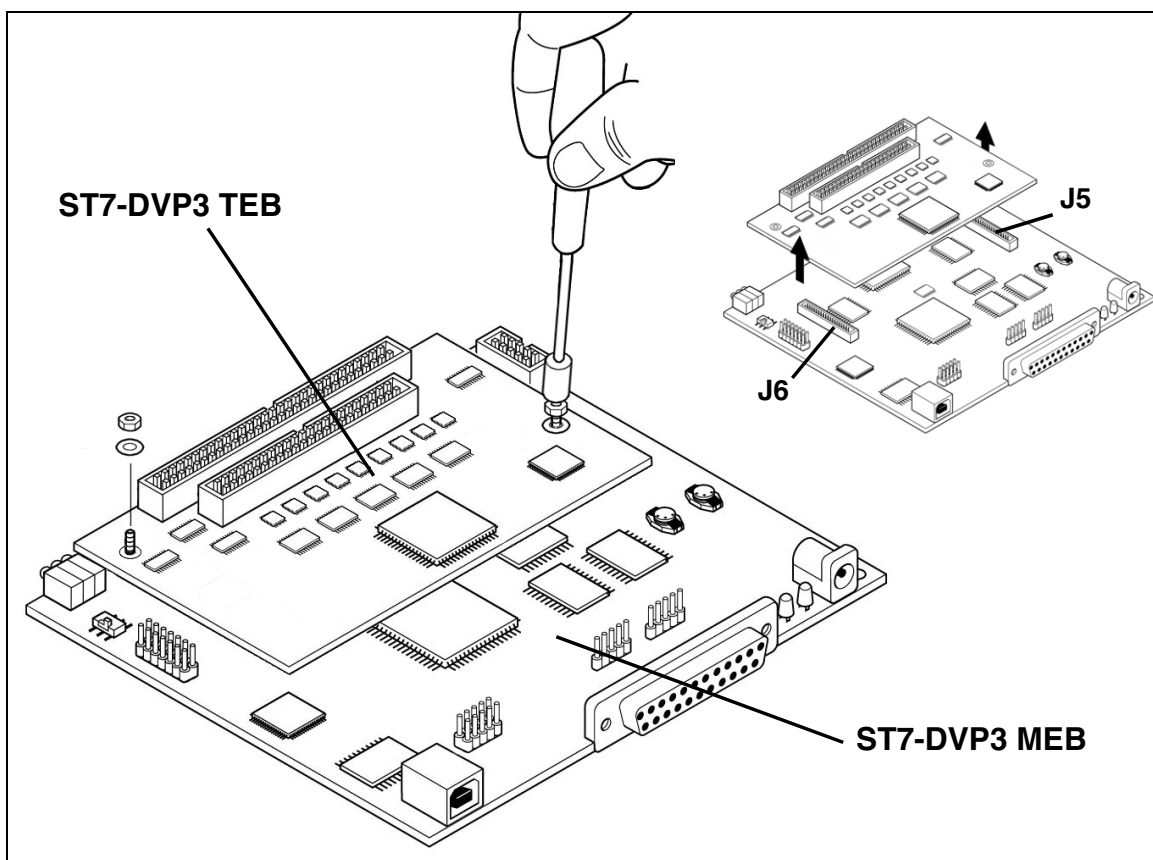


Figure 14: Unscrew and remove the TEB

- 4 Orient the replacement TEB as shown in [Figure 15](#). You can identify the bottom of the TEB by the two 60-pin connectors that link it to the MEB. On top of the

- TEB you will find the flat cable connectors (number and size will vary depending on the TEB).
- 5 Insert the TEB's two 60-pin connectors into the connectors **J5** and **J6** on the MEB. Because of the orientation guides on these connectors, there is only one possible connection scheme.
 - 6 Secure TEB to the MEB by tightening the two nuts back in place, as shown in [Figure 15](#). Be careful not to overtighten them.

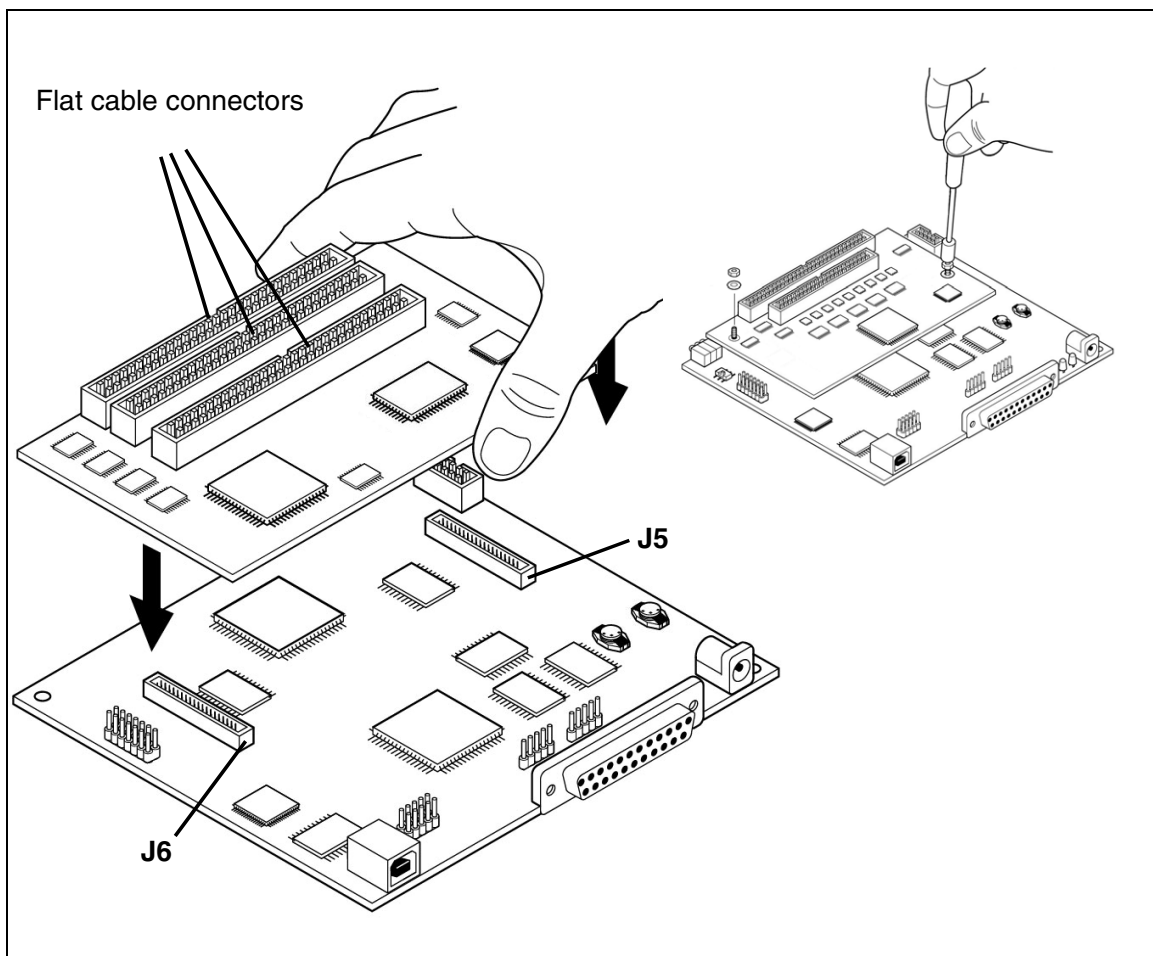


Figure 15: Install the replacement TEB

- 7 Using the appropriate flex cables and probe for your target MCU, reconnect your ST7-DVP3 emulator to your application board, as described in your *ST7xxx-DVP3 Probe User Guide*.
- 8 Reconnect your power supply and power up your ST7-DVP3 emulator and your application. For details refer to [Section 2.2](#) on page 10.

APPENDIX C: TROUBLESHOOTING

C.1 Identifying the problem

IF...	THEN...
You receive the Error Message (when starting the STVD7 for DVP): “Connection Error (LPT1): Interconnection failure. Verify your input/output cable.”	Ensure that: • The parallel cable is connected directly between the emulator and one of the PC’s parallel ports (LPT1 or LPT2). Note that the use of switch boxes between the parallel port connector of your PC and the emulator is not recommended. • The emulator is powered on. • The parallel cable used is the one supplied with the kit by STMicroelectronics. • STVD7 and Windows Epromer are not running at the same time. If this is the case then shut down both and ensure that only one or the other is running at any one time. If none of the above items has been overlooked, this may mean that your parallel port connection needs to be reconfigured. Please refer to Section 3.1.2: Changing the parallel port set up on page 13.
You receive the Error Message (during STVD7 session): “Emulator power off has been detected.”	Ensure that your emulator is powered on and shutdown and restart your STVD7 session.

C.2 Restricted connectors

The use of the following pins and jumpers on the Main Emulation Board (MEB) is restricted as described in [Table 5](#).

Pin or Jumper	Restriction
TP3	No Connections (<i>Reserved</i>)
TP4	No Connections (<i>Reserved</i>)
TP5	No Connections (<i>Reserved</i>)
TP9	No Connections (<i>Reserved</i>)
J2	No Jumpers (<i>Reserved</i>)
W1	No Jumpers (<i>Reserved</i>)

Table 5: Restricted pins and jumpers

C.3 Running the hardware test

STVD7’s **Hardware Test** lets you check that your emulator is correctly connected, configured and working. You can test components of the emulator individually, or all at the same time. You can run a hardware test without having a workspace (.stw) or a project (.stp) loaded.

Caution: *Performing a Hardware Test on the emulator while an application is open will corrupted any open application. If you find that your application has been corrupted, close the application, and reopen it.*


If problems occur during debugging (such as bad debugger responses and unexpected behavior), you should check for hardware problems using the Hardware Test function, and if any are detected, contact your STMicroelectronics sales representative (see [Product Support](#) on page 39).

Note: *Some MCU options and memory mappings will stop the launching of a Hardware Test. To run the hardware test you will have to reset the MCU to its default configuration. Do so by ending your debug session (**Debug>Stop Debugging**) and changing the MCU selection in the MCU tab of the Project Settings window (**Project>Settings**). Once you have change the MCU selection you can restart your debug session and run the hardware test.*

You can open the **Hardware Test** dialog box by:


- selecting, from the Main Menu, **Debug Instrument>Hardware Test**
- clicking on the Hardware Test icon  in the **Emulator** toolbar.

The Hardware Test dialog box shows a list of different tests that can be performed on the development board.

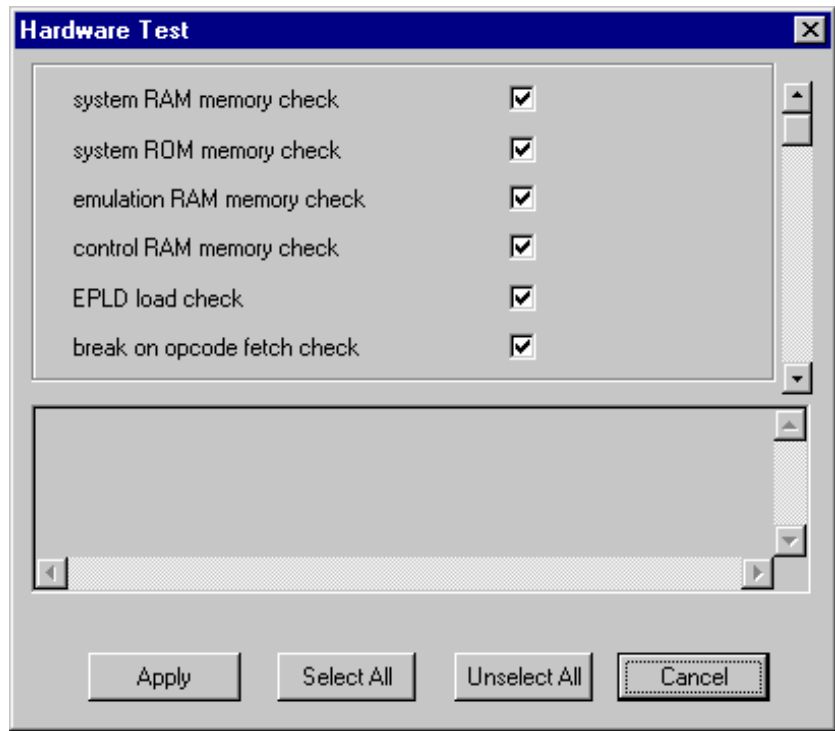

Check the box of each test that you wish to perform (they are all checked by default) and click **Apply** to start the hardware test.

The Hardware tests will be performed one by one, and the results summarized in the dialog box as shown at right:

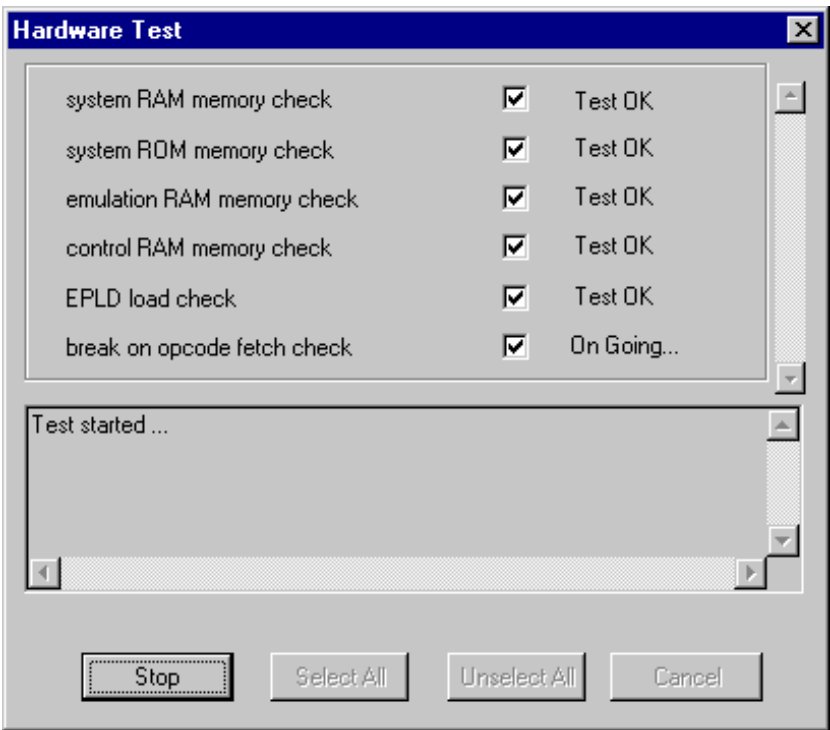

APPENDIX D: GLOSSARY

DIL

Dual In Line. Designates a type of device package with two rows of pins for thru-hole mounting. Sometimes also called DIP (Dual In-line Package).

ECP (Extended capabilities port communication standard)

A parallel-port standard that supports bi-directional communication between a PC and a peripheral device.

EEPROM (Electrically Erasable Programmable Read-Only Memory)

A non-volatile type of memory that can be erased and reprogrammed by program instructions. Since no special power supplies or ultra-violet light source is needed, the contents of this kind of memory can be changed without removing the MCU from the application system.

EPP (Enhanced parallel port communication standard)

A parallel port standard that supports bi-directional communication between a PC and a peripheral device other than a printer.

EPROM (Erasable Programmable Read-Only Memory)

A non-volatile type of memory that can be erased by exposure to an ultra-violet light source. MCUs that have EPROM are easily recognized because the package has a quartz window to allow exposure to the UV light. If the EPROM MCU is packaged in an opaque plastic package, it is called a “one-time programmable” OTP MCU because there is no way to expose the EPROM to a UV light source.

Footprint

Designates the dimensions of the location of a component on a printed circuit board or in a socket. It depends on the number of pins, their size, type and positioning. The footprint of each ST7 device is specified in the datasheet in the section titled *Package Mechanical Data*. (Refer to the ST7 MCU FAMILY DATABOOK or the datasheets provided on the “MCU on CD” CD-ROM).

I²C (Inter-integrated circuit)

A protocol for a bus that can be connected to multiple integrated circuits and that allows any one of them to initiate data transfer.

ICC (In-circuit communication)

A device communication protocol that is stored in the ST7 microcontroller's system memory. This protocol makes it possible to download programs to the MCU's RAM and execute them. This protocol enables in-circuit programming and debugging.

ICC monitor

Software that handles the ICC protocol, embedded in a reserved memory area of the ST7 Flash microcontroller. At RESET, using specific signal sequence, the ST7 jumps to this ICC monitor which allows it to download programs in RAM and to execute them. This feature is used for in-circuit programming.

ICD (In-circuit debugging)

The capability to debug an application on a FLASH device using on-chip resources (Debug module, MTC), made possible by the ICC protocol.

ICP (In-circuit programming)

The capability to program to ST7 FLASH memory while the microcontroller is plugged into the application board, made possible by the ICC protocol.

LVD (Low Voltage Detection)

A feature available on all of the ST7 MCUs. A LVD push button allows you to simulate what occurs when the MCU detects that the supply voltage is below a given threshold.

MCU (microcontroller)

Also referred to as the "target device" in this manual. This is the core product (or family of products) for which the emulator is designed to act as an emulator and programming tool. In general terms, an MCU is a complete computer system, including a CPU, memory, a clock oscillator and I/O on a single integrated circuit.

OTP (One Time Programmable)

Also referred to as OTPROM (One Time Programmable Read-Only Memory). A non-volatile type of memory that can be programmed but cannot be erased. An OTP ROM is an EPROM MCU that is packaged in an opaque plastic package—it is called a one-time programmable MCU because there is no way to expose the EPROM to a UV light source.

PC (Program Counter)

The CPU register that holds the address of the next instruction or operand that the CPU will use.

PLD (Programmable Logic Device)

An integrated circuit that can be programmed to perform complex functions.

PQFP (Plastic Quad Flat Package)

A family of integrated circuit packages for surface mounted assembly. This type is packaged with plastic, has a square flat shape and pins on all four sides.

RC network (Resistor-capacitor network)

A combination of resistors and capacitors in a circuit that are typically used to control or minimize voltage spikes.

SDIP (Shrink Dual In-Line Package)

A type of device package with two rows of pins for thru-hole mounting.

SO (Small outline)

A type of device package with two rows of pins for SMD or socket mounting.

STVD7 (ST7 Visual Debug)

A software package that allows you to debug applications destined for the ST7 family of MCUs, either using a built-in simulator function, a emulator or an emulator.

STVP7 (ST7 Visual Programmer)

A software application that allows you to program ICC-enabled microcontrollers using an ICC link for an emulator or a development kit.

Target Device

The ST7 devices that you have chosen for your application microcontroller and that you will emulate or program.

TEB (Target Emulation Board)

A Target Emulation Board for the EMU3 series of emulators. A printed board having connector pins that, when plugged into the dedicated emulation board (DEB) of the EMU3 probe, allows you to connect the EMU3 probe to the MCU socket of the user application board.

TQFP (Thin Quad Flat Package)

A family of integrated circuit packages for surface mounted assembly. This type of package has a square, flat shape and pins on all four sides.

TTL (Transistor to Transistor Logic)

A bipolar technology where a transistor output is connected directly to the transistor input of the next stage, rather than connecting through a resistor or diode.

User Application Board

Your application board, which includes a connector for the ST7 device you have chosen to use.

ZIF Socket (Zero Insertion Force Socket)

A type of programming socket that is mounted directly on the development board. To program an MCU, you insert it into the appropriate socket (i.e. the SDIP56/SDIP42 combo socket or the TQFP64 ZIF socket).

PRODUCT SUPPORT

If you experience any problems with this product, if you need spare parts or repairs, contact the distributor or the STMicroelectronics sales office where you purchased the product. Phone numbers for major sales regions are provided in the [Contact List](#), below.

In addition, at our Internet site www.st.com/mcu, you will find a complete listing of ST sales offices and distributors, as well as documentation, software downloads and user discussion groups to help you answer questions and stay up to date with our latest product developments.

Software updates

All our latest software and related documentation are available for download from the ST Internet site, www.st.com/mcu. For information about firmware and hardware revisions, call your distributor or ST using the [Contact List](#) provided below.

Hardware spare parts

Your development tool comes with the hardware you need to set it up, connect it to your PC and connect to your application. However, some components can be bought separately if you need additional ones. You can order extra components, such as sockets and adapters, from STMicroelectronics, from the component manufacturer or from a distributor.

Sockets

Complete documentation and ordering information for P/TQFP sockets from Yamaichi, Ironwood, CAB and Enplas are provided at the following Internet sites:

www.yamaichi.de

www.ironwoodelectronics.com

www.cabgmbh.com

www.enplas.com

Connectors

Complete documentation and ordering information for SAMTEC connectors is provided at www.samtec.com.

Getting prepared before you call

Collect the following information about the product before contacting ST or your distributor:

- 1 Name of the company where you purchased the product.
- 2 Date of purchase.
- 3 Order Code: Refer to the side your emulators box. The order code will depend on the region in which it was ordered (i.e. the UK, Continental Europe or the USA).
- 4 Serial Number: The serial number is found on the Global Reference card provided with the emulator.
- 5 TEB (Target Emulation Board) hardware and firmware versions: The hardware and firmware versions can be found by opening an STVD7 session, entering the debug context and selecting **Help>About** from the main menu. The TEB version numbers are given in the *Target box* – scroll downwards until you find the TEB version (hardware) and TEB PLD version (firmware).
- 6 Target Device: The sales type of the ST microcontroller you are using in your application.

Contact List

North America

Canada and East Coast

STMicroelectronics
Lexington Corporate Center
10 Maguire Road, Building 1, 3rd floor
Lexington, MA 02421
Phone: (781) 402-2650

Mid West

STMicroelectronics
1300 East Woodfield Road, Suite 410
Schaumburg, IL 60173
Phone: (847) 585-3000

West coast

STMicroelectronics, Inc.
1060 E. Brokaw Road
San Jose, CA 95131
Phone: (408) 452-8585

Note: For American and Canadian customers seeking technical support the US/Canada is split in 3 territories. According to your area, contact the appropriate sales office from the list above and ask to be transferred to an 8-bit microcontroller Field Applications Engineer.

Europe

France +33 (0)1 47 40 75 75

Germany +49 89 46 00 60

U.K. +44 162 889 0800

Asia/Pacific Region

Japan +81 3 3280 4120

Hong-Kong +85 2 2861 5700

Sydney +61 2 9580 3811

Taipei +88 6 2 2378 8088

Index

A

analyzer input connection 21

C

clock
external clock connector 21

D

development kit
delivery checklist 7
setting up 7
system requirements 6
documentation
manual contents 5
textual conventions 5

E

ECP
definition of 35
EMC compliancy
attaching ferrite clips 10, 11
emulator kit
connecting to PC 12
EXTCLK 21

F

finished goods
manipulation of 29
safety requirements 29

H

hardware
events (see STVD7)
test 33

I

ICC
connection requirements 24
ICP
definition 36

L

LEDs
description of 17

P

parallel port
change set up 13
connection 13
supported modes 13
power supply
connecting 17
mains voltage specifications 18
powering up
device sequence 10
important warning 10

S

software updates 39
ST Micro Connect box
parallel port connection 13
power supply 17
USB port connection 14
STVD7
hardware events 19
support
for programming board 39
web support 6

T

target device
definition of 37
triggers
external output (TRIGOUT) 19
input (TRIGIN) 20
input and output 19
TRIGIN 20
TRIGOUT 19
troubleshooting 32
connection error 32

U

USB port

Index

connection.....	14
user application board	
definition of.....	38

V

voltage	
---------	--

selection switch	18
------------------------	----

Z

Zero insertion force (ZIF) socket	
definition of	38

Information furnished is believed to be accurate and reliable. However, STMicroelectronics assumes no responsibility for the consequences of use of such information nor for any infringement of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of STMicroelectronics. Specifications mentioned in this publication are subject to change without notice. This publication supersedes and replaces all information previously supplied. STMicroelectronics products are not authorized for use as critical components in life support devices or systems without the express written approval of STMicroelectronics.

The ST logo is a registered trademark of STMicroelectronics

©2004 STMicroelectronics - All Rights Reserved.

Purchase of I²C Components by STMicroelectronics conveys a license under the Philips I²C Patent. Rights to use these components in an I²C system is granted provided that the system conforms to the I²C Standard Specification as defined by Philips.

STMicroelectronics Group of Companies

Australia - Belgium - Brazil - Canada - China - Czech Republic - Finland - France - Germany - Hong Kong - India - Israel - Italy - Japan - Malaysia - Malta - Morocco - Singapore - Spain - Sweden - Switzerland - United Kingdom - United States of America

www.st.com