


Getting started with the X-NUCLEO-SNK1M1 USB Type-C® Power Delivery Sink expansion board based on TCPP01-M12 for STM32 Nucleo

Introduction

Figure 1. X-NUCLEO-SNK1M1 expansion board

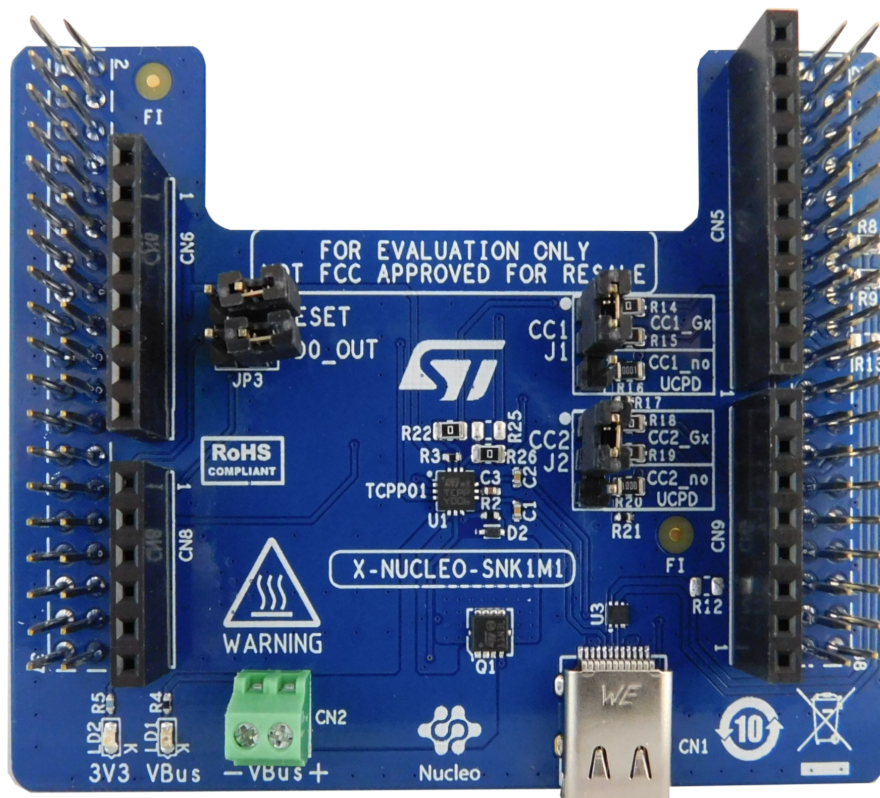

Note: Before running any demo, set CC1 J1, CC2 J2, JP3 and JP4 jumpers according to the configuration described in Section 1.3: Demo application setup.

Notice: For dedicated assistance, please submit a request through our online support portal at www.st.com/support.

1 Getting started

1.1 Overview

The **X-NUCLEO-SNK1M1** expansion board features:

- On-board TCPP01-M12 protection for USB Type-C® and PD Sink applications
- Compliant with the latest USB Type-C® and Power Delivery specification, including the Programmable Power Supply (PPS) feature
- USB-IF certified (Test ID certification: 5205)
- 100 W-rated solution
- 6 V overvoltage protection (OVP) on CC lines against short-to- V_{BUS} when the connector is unplugged
- Up to 22 V adjustable overvoltage protection (OVP) on V_{BUS} line against charger failure
- Surge protection (8/20 μ s) and system-level ESD protection on V_{BUS}
- Common mode filter and ESD protection on USB 2.0 High Speed data lines
- System level ESD protection on CC lines as per IEC61000-4-2 level 4 (± 8 kV contact discharge)
- Low power mode for battery operation allowing zero current consumption when no cable is attached
- Integrated dead battery management when the device battery is fully depleted
- Overtemperature protection (OTP)
- RoHS compliant

1.2 Hardware architecture

The **X-NUCLEO-SNK1M1** expansion board is designed to be used with any **STM32 Nucleo-64** development board embedding the UCPD peripheral (mainly **NUCLEO-G071RB**, **NUCLEO-G474RE** and **NUCLEO-G0B1RE**) and also with the ones not supporting the UCPD peripheral.

Note: *The compliance with the USB Type-C® and Power Delivery specification is guaranteed only for the STM32 Nucleo development boards embedding the microcontrollers (STM32G071RB and STM32G474RE) with a UCPD peripheral.*

When stacked with a non-UCPD STM32 Nucleo development board, the **X-NUCLEO-SNK1M1** can still demonstrate some USB Type-C® basic operations like ATTACH/DETACH recognition and identification of source current capability.

Moreover, two couples of resistances, used as solder bridge selectors, allow exploiting the USB2.0 peripheral.

The expansion board must be plugged on the matching pins of the development board CN7 and CN10 ST morpho connectors.

When plugged onto an **STM32 Nucleo** development board, the expansion board can be supplied in two different ways:

- by the **STM32 Nucleo** ST-LINK supply using the development board internal LDO
- by the V_{BUS} provided when a Source is plugged into the CN1 USB Type-C® connector and thanks to the integrated **ST715PU33R** LDO linear regulator (U2) that supplies the entire system, which supports Dead Battery operation mode.

Figure 2. X-NUCLEO-SNK1M1 main functional blocks (top view)

1. Morpho connector (CN7)
2. Arduino connector (CN6, CN8)
3. Reset jumper (JP4)
4. LDO OUT jumper (JP3)
5. 3V3 LED (LD2)
6. V_{BUS} LED (LD1)
7. Power connector (CN2)
8. **TCPP01-M12** USB-C overvoltage protection for V_{BUS} and CC lines (U1)
9. **BAT54K** Schottky diode (D2)
10. CC1 line configuration jumper (J1)
11. CC2 line configuration jumper (J2)
12. USB data setting resistor (R12)
13. **ECMF02-2AMX6** common-mode filter and ESD protection for USB 2.0 and MIPI/MDDI interfaces (U3)
14. USB Type-C® connector (CN1)
15. **STL11N3LLH6** N-channel 30 V, 6 mOhm typ., 11 A STripFET H6 Power MOSFET (Q1)
16. Arduino connector (CN5, CN9)
17. Morpho connector (CN10)
18. USB data setting resistor (R8, R9)
19. USB data setting resistor (R13)


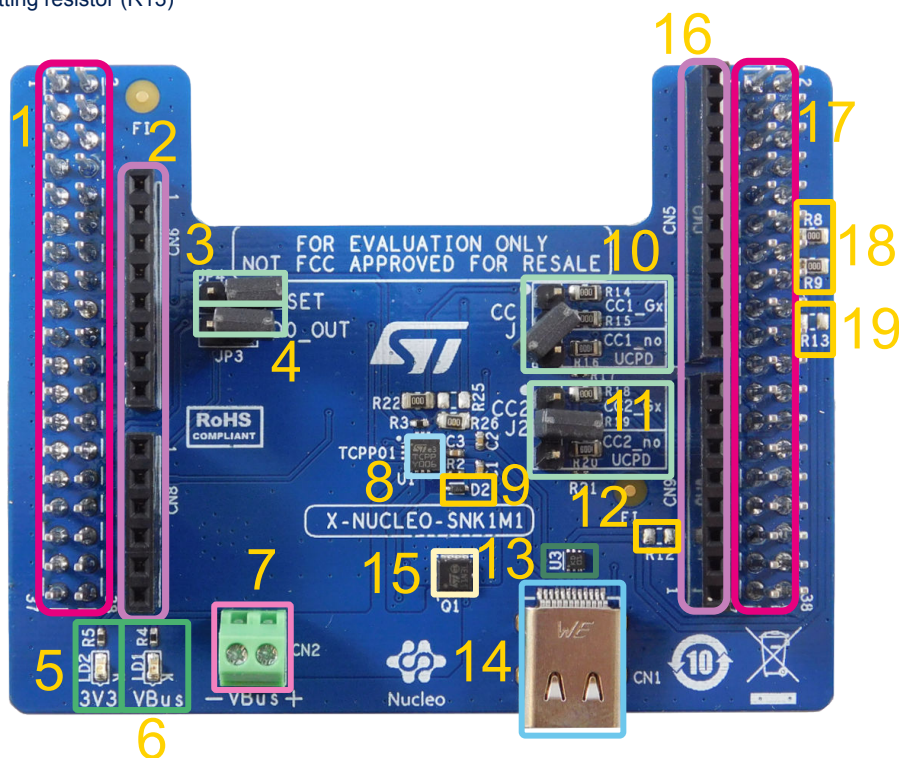


Figure 3. X-NUCLEO-SNK1M1 main functional blocks (bottom view)


1. Morpho connector (CN10)
2. ESDA25P35-1U1M TVS diode (D1)
3. OVP threshold solder bridges (SH1, SH2, SH3, SH4, SH5)
4. ST715PU33R high input voltage LDO linear regulator (U2)
5. Morpho connector (CN7)

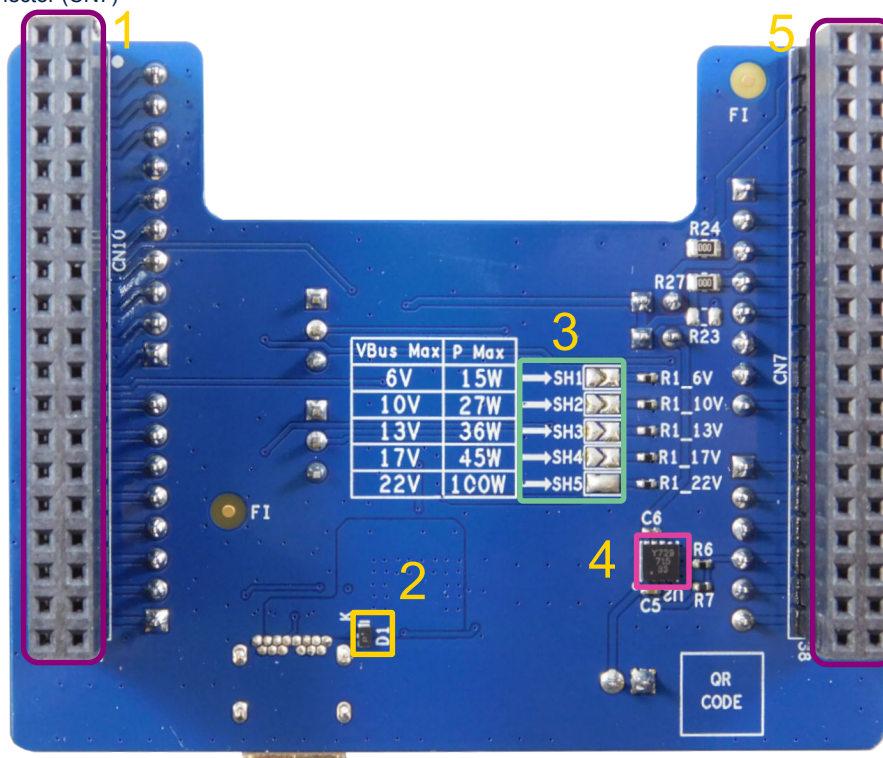

1.2.1

USB Type-C® connector

The USB Type-C® receptacle (CN1) gathers the V_{BUS} path and the main connections, such as CC lines and USB2.0 data lines (DP, DM), before dispatching data to the major functional blocks.

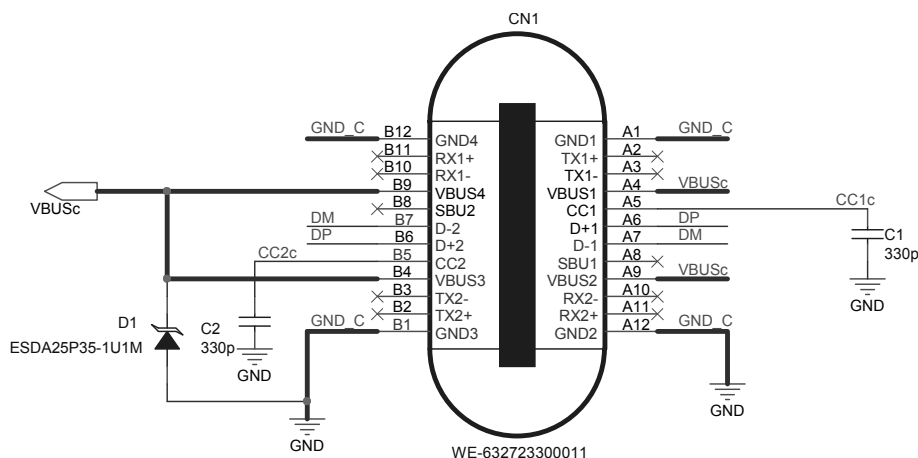Figure 4. Type-C receptacle (CN1) and ESDA25P35-1U1M TVS diode (D1)


Note: V_{BUS} path capacitive value should be included between 1 μF and 10 μF for a USBPD SINK port design.


An ESDA25P35-1U1M TVS diode has been integrated to protect the V_{BUS} power line and, consequently, the entire system against EOS and ESD transients when a Source is connected through the USB Type-C® cable.

1.2.2 TCPP01-M12 USB Type-C® protection and V_{BUS} overvoltage protection setup

TCPP01-M12 (U1) protects the CC1 and CC2 pins of the USB Type-C® and PD controller sink against overvoltage in case a short-circuit event with the V_{BUS} occurs during the attach or detach operation with a defective tool.

The protection is implemented by removing the USB Type-C® cable from its receptacle.

Figure 5. TCPP01-M12 protection (U1) driving the STL11N3LLH6 MOS (Q1)

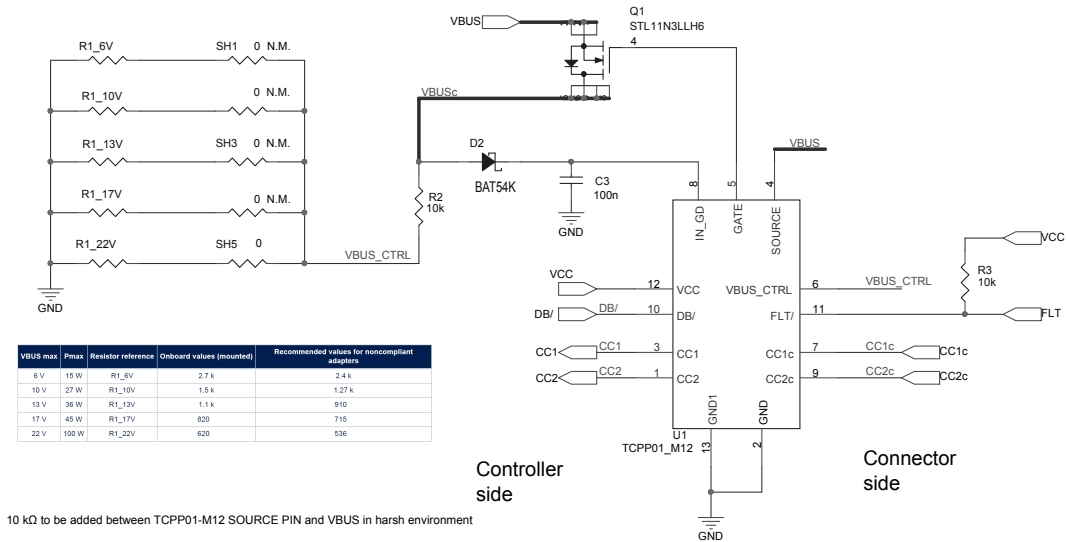

TCPP01-M12 overvoltage protection (OVP) threshold setup mechanism is based on a resistive network composed of five resistors (R1_6V, R1_10V, R1_13V, R1_17V and R1_22V) and five solder bridges (SH1, SH2, SH3, SH4, and the SH5). Connected to the device through the **BAT54K** signal Schottky diode (D2), this section is shown in the figure above (left side) and is placed at the board bottom.

On the **X-NUCLEO-SNK1M1** expansion board, the 22 V OVP threshold is set by default via SH5. To change the threshold to another value (6, 10, 13 or 17 V), remove SH5 and add a different solder bridge on the selected OVP voltage.

When a defective power source plugged onto the Type-C connector produces a voltage higher than the selected OVP threshold, the **TCPP01-M12** OVP mechanism controls the external MOSFET Q1 and interrupts the V_{BUS} line.

The current **X-NUCLEO-SNK1M1** setup is compliant with the USB Type-C® and power delivery specifications. It is certified by USB-IF, with TID certification no. 5205.

However, some USB Type-C® adapters and equipment, which are not compliant with the specification, might latch the solution to overvoltage when connected to it. This is due to the generation of an initial spike that is very close to the OVP upper limit.

In such occurrences, we suggest replacing the resistance values according to the values reported in the table below, in the “Recommended resistor” column.

Table 1. Resistor values

VBUS max	Max	Resistor reference	Onboard values (mounted)	Recommended values for noncompliant adapters
6 V	15 W	R1_6V	2.7 k	2.4 k
10 V	27 W	R1_10V	1.5 k	1.27 k
13 V	36 W	R1_13V	1.1 k	910
17 V	45 W	R1_17V	820	715
22 V	100 W	R1_22V	620	536

This new set of resistors still filters against voltage spike at startup, but do not latch the OVP.

You can use several Q1 MOSFET references with various tradeoffs on the key parameters: the size for the PCB surface, $R_{DS(on)}$ for the static drain-source on-resistance insertion losses and V_{DS} for the maximum drain-source voltage when the surge is clamped by the TVS diode (D1).

The dual Q1 MOSFET (back-to-back configuration) is required if the voltage is maintained on the consumer path when there is no V_{BUS} voltage.

Table 2. N-MOSFET performance tradeoff

Order code	N-MOSFET	Package		$R_{DS(on)}$ typ.	V_{DS} max.
STL6N3LLH6	Single	PowerFLAT 2x2	Single island	32 mΩ	30 V
STL11N3LLH6	Single	PowerFLAT 3.3x3.3	Single island	8.4 mΩ	30 V
STL260N4LF7	Single	PowerFLAT 5x6	Single island	1.2 mΩ	40 V
STL40DN3LLH5	Dual	PowerFLAT 5x6	Dual island	20 mΩ	30 V
STL105DN4LF7AG	Dual	PowerFLAT 5x6	Dual island	5.3 mΩ	40 V

In a harsh environment, a 10kΩ resistor between the **TCP01-M12** SOURCE PIN and VBUS prevents damage to the **TCP01-M12**. This resistor does not affect the normal operation of the **TCP01-M12**.


1.2.3

CC lines and configuration jumpers

Two headers for jumpers (J1 and J2) have been integrated to change the CC lines paths from the **TCP01-M12** protection to the ST morpho connectors (CN7 and CN10) on the **STM32 Nucleo** development board, setting them differently according to the peripheral mapping of the STM32 microcontroller.

This integration guarantees the solution flexibility support for the demo across the STM32 Nucleo-64 development board range.

Figure 6. CC line configuration jumpers

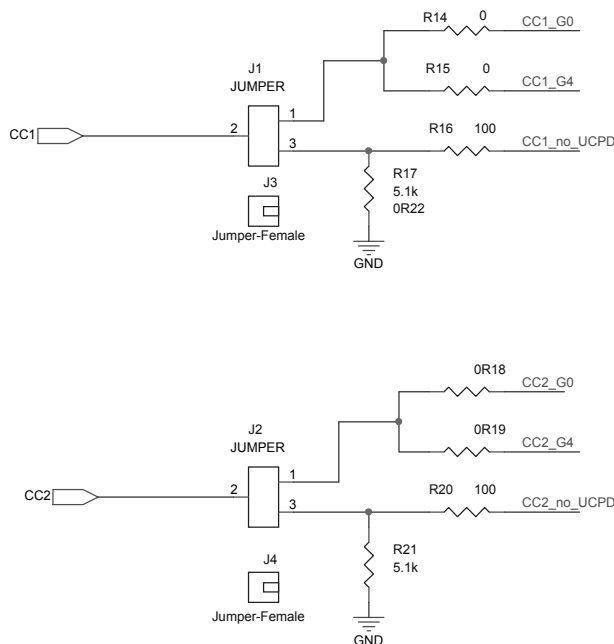

The table below shows the jumper settings to configure the **X-NUCLEO-SNK1M1** to work with the **STM32 Nucleo** development boards embedding the UCPD peripherals (**NUCLEO-G071RB**, **NUCLEO-G474RE** and **NUCLEO-G0B1RE**) as well as with other STM32 Nucleo-64 boards (**NUCLEO-L412RB-P**) implementing the USB Type-C® attach-detach recognition mechanism.

Table 3. J1 and J2 CC lines configuration setting jumpers

Compatible STM32 Nucleo boards	Jumpers	
	CC1 - J1	CC2 -J2
Any STM32 Nucleo-64 development board with UCPD (NUCLEO-G071RB, NUCLEO-G474RE and NUCLEO-G0B1RE)		
Any STM32 Nucleo-64 development board without UCPD (NUCLEO-L412RB-P)		

When both configuration jumpers (J1 and J2) are set to positions 1-2, the board is compatible with **NUCLEO-G071RB**, **NUCLEO-G474RE** and **NUCLEO-G0B1RE** offering the UCPD peripheral.

This association permits to fully demonstrate the main characteristics of the USB Type-C® and Power Delivery standards implemented by the demo application example.


When J1 and J2 are both set to positions 2-3, the **X-NUCLEO-SNK1M1** can match any STM32 Nucleo-64 development board, demonstrating the basic mechanism of the Type-C specification, thanks to two pull-down resistors (R17 and R21) connected to the pins working as CC lines, allowing the Sink USB Type-C® operations to run with any attached Source.

1.2.4 USB 2.0 data path and configuration setting

The **X-NUCLEO-SNK1M1** expansion board allows **STM32 Nucleo** development boards that feature a USB2.0 peripheral to expose the D+/D- lines on the USB Type-C® receptacle (CN1).

Most STM32 Nucleo-64 development boards feature this functionality on the ST morpho connector CN10-12 and CN10-14 pins, whereas **NUCLEO-L412RB-P**, **NUCLEO-L433RC-P**, **NUCLEO-L452RE-P** and **NUCLEO-L476RG** boards map USB2.0 data pins on CN10-33 and CN10-17 pins.

Two couples of resistances has been implemented and connected to the **ECMF02-2AMX6** (U3) USB2.0 data lines protection to extend the use of this peripheral to all the STM32 Nucleo-64 development boards.

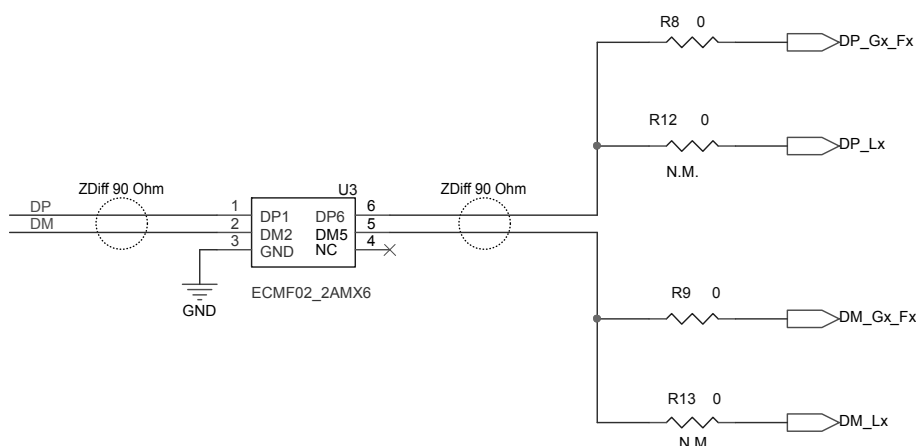
Figure 7. USB2.0 data lines protection ECMF02-2AMX6 (U3) and resistor setup


By default, the **X-NUCLEO-SNK1M1** board mounts R8 and R9 resistors fitted to guarantee USB2.0 compatibility to all the main microcontroller families, but, for the L4 family (**NUCLEO-L412RB-P**, **NUCLEO-L433RC-P**, **NUCLEO-L452RE-P** and **NUCLEO-L476RG**) only, they have to be removed and replaced by R12 and R13 solder bridges.

1.2.5 ST morpho and Arduino UNO V3 connectors

The figure below shows the **X-NUCLEO-SNK1M1** expansion board ST morpho and Arduino UNO V3 connectors, detailing the main connections, functions and configuration settings.

Figure 8. ST morpho and Arduino UNO V3 connectors

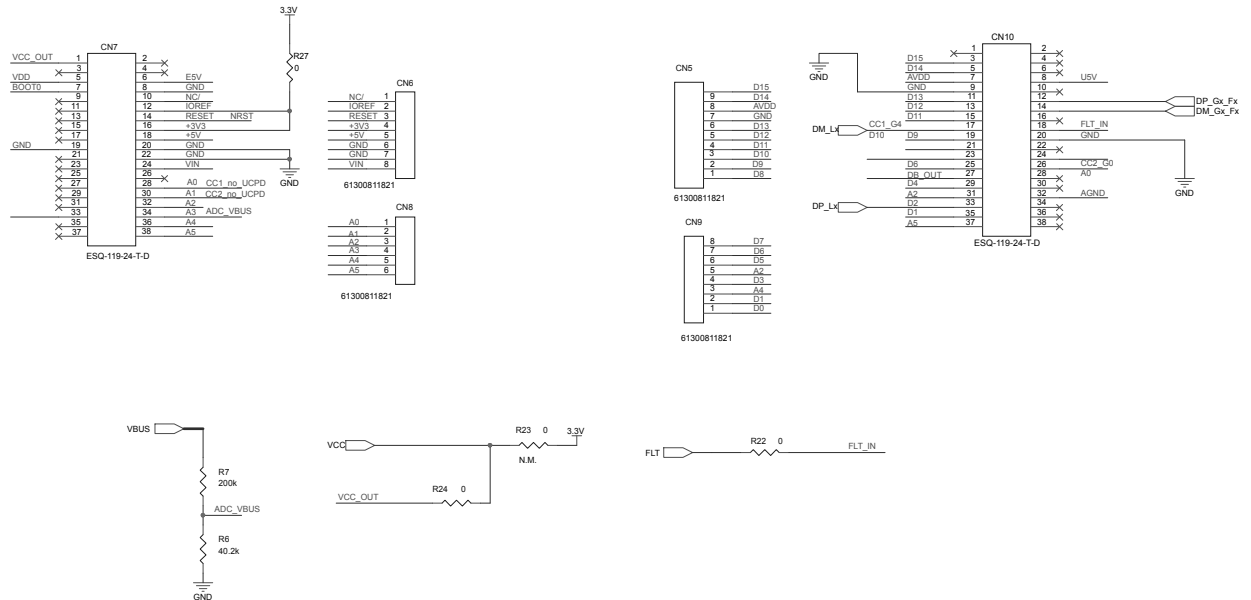


In addition to the main functions related to the USB Type-C® and Power Delivery specification:

- an ADC channel can be used to monitor the V_{BUS} voltage (ADC_VBUS)
- a supply option path allows supplying the **TCPP01-M12** either via the 3.3 V provided by the **STM32 Nucleo** development board or via a GPIO on the ST morpho connector (CN7-1). You can select the path through R23 and R24 resistances. This option, combined with the **TCPP01-M12** low consumption, is useful for battery-powered devices as the **TCPP01-M12** can be powered only when an attachment is detected (low-power mode)
- the **TCPP01-M12** fault report pin (open drain) is connected to the ST morpho connector pin (CN10 – 18) to be monitored by the STM32 microcontroller (FLT – FLT_IN path)

1.2.6 Indication LEDs

Two LEDs mounted on the **X-NUCLEO-SNK1M1** top side indicate the supply status of the expansion board and the stacked **STM32 Nucleo** development board:

- the red LED (LD1) turns ON when a source application board is plugged to the **X-NUCLEO-SNK1M1** CN1 connector and the USB Type-C® V_{BUS} voltage is present;
- the green LED (LD2) indicates that the 3.3 V is present and is supplying the **STM32 Nucleo** microcontroller development board.

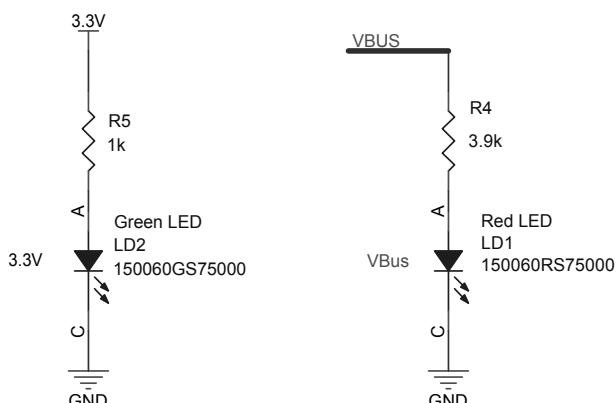
Figure 9. Indication LEDs


1.2.7 Dead battery mode configuration jumpers and internal LDO

Thanks to the dead battery feature, described by the USB Power Delivery specification and implemented by the **X-NUCLEO-SNK1M1**, it is possible to directly power the system through the V_{BUS} provided by a Source, as an alternative mode to the standard supply through the **STM32 Nucleo ST-LINK**.

Note: Before configuring the **X-NUCLEO-SNK1M1** to operate in dead battery mode, check whether the supply selection jumpers on the **STM32 Nucleo** board have been removed:

- on the **NUCLEO-G071RB** and the **NUCLEO-G0B1RE**, remove the jumper from JP2 header
- on the **NUCLEO-G474RE**, remove the jumper from JP5 header 5V_SEL
- on the **NUCLEO-L412RB-P**, remove the jumper from JP5 header

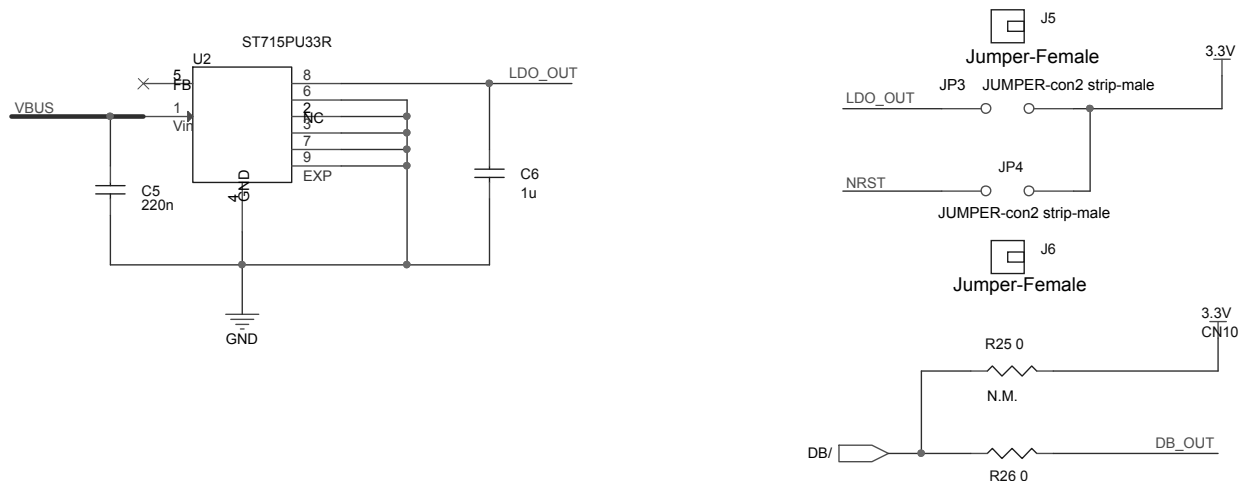Figure 10. Dead battery mode circuitry


To select the dead battery operation mode on the **X-NUCLEO-SNK1M1**, JP3 and JP4 jumpers must be fit.

Table 4. JP3 and JP4 power mode selection jumpers

Power mode	Jumpers	
	JP3 (LDO_OUT)	JP4 (RESET)
ST-LINK powered mode	 (open)	 (open)

Power mode	Jumpers	
	JP3 (LDO_OUT)	JP4 (RESET)
Dead battery mode	 (fit)	 (fit)

JP3 jumper connects the V_{BUS} path from the Type-C connector to the LDO (U2) which is connected to the **STM32 Nucleo** development board 3.3 V path and can power the entire solution.

When fitted, JP5 jumper forces the STM32 I/O negative reset to level 1. It must be connected when the STM32 is powered by the **X-NUCLEO-SNK1M1**.


By default, the **TCPP01-M12** dead battery option has been set to be driven by an STM32 microcontroller pin through R26 solder bridge, thus removing the **TCPP01-M12** dead battery clamp when GPIO is connected on ST morpho connector (CN10-24). The alternative operating mode is to fit the **TCPP01-M12** dead battery option to 3V3 through the R25 mounting solder bridge (consequently, R26 must be not fitted).

In the application firmware package, this option has been included in the firmware examples where a GPIO (ST morpho CN10-24) properly drives the dead battery option.

1.2.8 Power connector

CN2 power connector can be used to connect a load and monitor the V_{BUS} voltage level negotiated by the system with a Source attached to CN1 USB Type-C® connector.

Figure 11. CN2 power connector

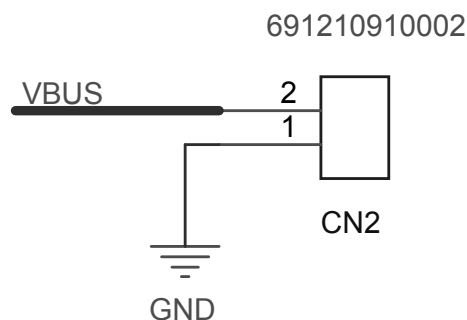

Note: To monitor the output voltage, an appropriate resistance has to be connected to the **X-NUCLEO-SNK1M1** CN2.

1.3 Demo application setup

The **X-NUCLEO-SNK1M1** expansion board flexibility permits to demonstrate the **TCPP01-M12** protection features and capabilities with a wide range of **STM32 Nucleo** development boards.

The **X-CUBE-TCPP** companion software package contains specific application examples for the **STM32 Nucleo** embedding the USB Type-C® and Power Delivery management (**NUCLEO-G071RB**, **NUCLEO-G474RE** and **NUCLEO-G0B1RE**) and, for the ones without the UCPD peripheral, the package demonstrates how to comply with basic USB Type-C® operations (**NUCLEO-L412RB-P**).

1.3.1 Programming and debugging

Once the **X-NUCLEO-SNK1M1** expansion board has been connected to a **NUCLEO-G071RB**, **NUCLEO-G474RE**, **NUCLEO-G0B1RE** or **NUCLEO-L412RB-P**, to program and debug, the **STM32 Nucleo** development board has to be connected to a laptop by the embedded USB **ST-LINK** connector (CN2) to supply the solution and program the firmware example in the application microcontroller.

Note: Set the jumpers as follows:

- On the **STM32 Nucleo** development board, ensure the 5 V selection jumper fits with the 5 V **ST-LINK** header (JP5 on **NUCLEO-G474RE** and **NUCLEO-L412RB-P**, JP2 on **NUCLEO-G071RB** and **NUCLEO-G0B1RE**)
- On the **X-NUCLEO-SNK1M1** expansion board:
 - remove LDO OUT jumper (JP3)
 - remove NRST jumper (JP4)

Note: The **X-CUBE-TCPP** MCU firmware applications are designed to select the highest and closest power profile exposed by the Source, after the explicit contract negotiation.

1.3.1.1 Running the demo application with **NUCLEO-G071RB** or **NUCLEO-G0B1RE** development board

The **NUCLEO-G071RB** development board embeds the **STM32G071RB** microcontroller with the UCPD peripheral. To run the application demo with the **NUCLEO-G071RB**, powering the system via **ST-LINK** micro-USB connector, follow the procedure below.

- Step 1.** Check the jumper is closed on the development board JP2 header, STLK 1-2 pins.
- Step 2.** On the **X-NUCLEO-SNK1M1** expansion board, fit CC1 JP1 and CC2 JP2 jumpers on position 1-2.
- Step 3.** Plug the expansion board on top of the **STM32 Nucleo** and leave JP3 and JP4 headers open.
- Step 4.** Connect the **NUCLEO-G071RB** or **NUCLEO-G0B1RE** micro-USB connector (CN1) to the PC/laptop. The board appears as a virtual disk (NODE_G071RB).
- Step 5.** Program the **STM32G071RB** by dragging and dropping the binary file corresponding to the board (G0_SNK1M1_Consumer.bin) to the virtual disk.
STM32 Nucleo LD1 LED blinks red and green for few seconds. When the LED stops blinking, the programming operation is complete and the demo is ready.
- Step 6.** Plug a Source application board on the **X-NUCLEO-SNK1M1** expansion board CN1 connector through a USB Type-C® cable and refer to the following LED operation description to identify the application results:
 - **NUCLEO-G071RB/NUCLEO-G0B1RE** LD3 LED is ON when the board is supplied by the **ST-LINK** micro-USB connector (CN1)
 - **X-NUCLEO-SNK1M1** LD2 LED is ON when the 3V3 voltage is provided to the expansion board by the **STM32 Nucleo**
 - **X-NUCLEO-SNK1M1** LD1 LED is ON when a Source is connected to the USB Type-C® CN1 connector and the V_{BUS} is provided
 - **NUCLEO-G071RB/NUCLEO-G0B1RE** LD4 LED:
 - blinks once every 2 seconds when USB default (up to 500 mA) is identified
 - blinks twice every 2 seconds when a Source USB Type-C® 1.5 A current capability is identified;
 - blinks 3 times every 2 seconds when a Source USB Type-C® 3 A current capability is identified;
 - is ON when the explicit negotiation between the two contractors is reached.

1.3.1.1.1 Dead battery operation mode

- Step 1.** Repeat steps 1- 4 described in Section 1.3.1.1
- Step 2.** Disconnect the micro-USB cable from **NUCLEO-G071RB/NUCLEO-G0B1RE** CN1.
- Step 3.** Remove the power selection jumper from the JP2 header on **NUCLEO-G071RB/NUCLEO-G0B1RE** development board (previously set on STLK 1-2 pins) and leave it fully open.
- Step 4.** On the **X-NUCLEO-SNK1M1**, set LDO OUT jumper (JP3) and NRST jumper (JP4).
- Step 5.** Plug a Source board to **X-NUCLEO-SNK1M1** CN1 connector through a USB Type-C® cable. The provided V_{BUS} supplies the Sink solution while the LEDs define the status as previously described.

1.3.1.2 **Running the demo application with NUCLEO-G474RE development board**

The NUCLEO-G474RE development board embeds the STM32G474RE microcontroller with the UCPD and USB2.0 data peripherals. To run the application demo with the NUCLEO-G474RE, powering the system via ST-LINK micro-USB connector, follow the procedure below.

- Step 1.** Check the jumper is closed on the development board JP5 header, 5V_STLK 1-2 pins.
- Step 2.** On the X-NUCLEO-SNK1M1 expansion board, fit CC1 JP1 and CC2 JP2 jumpers on position 1-2.
- Step 3.** Plug the expansion board on top of the STM32 Nucleo and leave JP3 and JP4 headers open.
- Step 4.** Connect the NUCLEO-G474RE micro-USB connector (CN1) to the PC/laptop.
The board appears as a virtual disk (NODE_G474RE).
- Step 5.** Program the STM32G474RE by dragging and dropping the binary file corresponding to the board (G4_SNK1M1_Consumer.bin) to the virtual disk.
STM32 Nucleo LD1 LED blinks red and green for few seconds. When the LED stops blinking, the programming operation is complete and the demo is ready.
- Step 6.** Plug a Source application board on the X-NUCLEO-SNK1M1 expansion board CN1 connector through a USB Type-C® cable and refer to the following LED operation description to identify the application results:
 - NUCLEO-G474RE LD3 LED is ON when the board is supplied by the ST-LINK micro-USB connector (CN1)
 - X-NUCLEO-SNK1M1 LD2 LED is ON when the 3V3 voltage is provided to the expansion board by the STM32 Nucleo
 - X-NUCLEO-SNK1M1 LD1 LED is ON when a Source is connected to the USB Type-C® CN1 connector and the VBUS is provided
 - NUCLEO-G474RE LD2 LED:
 - blinks once every 2 seconds when USB default (up to 500 mA) is identified
 - blinks twice every 2 seconds when a Source USB Type-C® 1.5 A current capability is identified;
 - blinks 3 times every 2 seconds when a Source USB Type-C® 3 A current capability is identified;
 - blinks 4 times every 2 seconds when the explicit negotiation between the two contractors is reached;
 - turns ON when the explicit negotiation between the two contractors is reached and the USB2.0 data connection is established.

1.3.1.2.1 **Dead battery operation mode**

- Step 1.** Repeat steps 1- 4 described in Section 1.3.1.2
- Step 2.** Disconnect the micro-USB cable from NUCLEO-G474RE CN1.
- Step 3.** Remove the power selection jumper from the JP2 header on NUCLEO-G474RE development board (previously set on STLK 1-2 pins) and leave it fully open.
- Step 4.** Set JP8 jumper on 2-3 pins.
- Step 5.** On the X-NUCLEO-SNK1M1, set LDO OUT jumper (JP3) and NRST jumper (JP4).
- Step 6.** Plug a Source board to X-NUCLEO-SNK1M1 CN1 connector through a USB Type-C® cable.
The provided V_{BUS} supplies the Sink solution while the LEDs define the status as previously described.

1.3.1.3 **Running the demo application with NUCLEO-L412RB-P development board**

The NUCLEO-L412RB-P development board embeds the STM32L412RB microcontroller which includes the USB2.0 data peripheral only. The application example demonstrates that the TCPP01-M12 protection can be matched with microcontrollers which does not include the UCPD peripheral to implement a USB Type-C® Sink port only, thus exploiting the microcontroller ADC peripherals to monitor the current capabilities of the Source. To run the application demo with the NUCLEO-L412RB-P, powering the system via ST-LINK micro-USB connector, follow the procedure below.

- Step 1.** Check the jumper is closed on the development board JP5 header, 5V_STLK 1-2 pins.
- Step 2.** On the X-NUCLEO-SNK1M1 expansion board, fit CC1 JP1 and CC2 JP2 jumpers on position 1-2.
- Step 3.** Plug the expansion board on top of the STM32 Nucleo and leave JP3 and JP4 headers open.
- Step 4.** Connect the NUCLEO-L412RB-P micro-USB connector (CN1) to the PC/laptop.
The board appears as a virtual disk (NODE_L412RB).
- Step 5.** Program the STM32L412RB by dragging and dropping the binary file corresponding to the board (SNK1M1_Consumer_TypeC_Only.bin) to the virtual disk.
STM32 Nucleo LD1 LED blinks red and green for few seconds. When the LED stops blinking, the programming operation is complete and the demo is ready.
- Step 6.** Plug a Source application board on the X-NUCLEO-SNK1M1 expansion board CN1 connector through a USB Type-C® cable and refer to the following LED operation description to identify the application results:
 - NUCLEO-L412RB-P LD3 LED is ON when the board is supplied by the ST-LINK micro-USB connector (CN1)
 - X-NUCLEO-SNK1M1 LD2 LED is ON when the 3V3 voltage is provided to the expansion board by the STM32 Nucleo
 - X-NUCLEO-SNK1M1 LD1 LED is ON when a Source is connected to the USB Type-C® CN1 connector and the V_{BUS} is provided
 - NUCLEO-L412RB-P LD2 LED:
 - blinks once every 2 seconds when USB default is identified
 - blinks twice every 2 seconds when a Source USB Type-C® 1.5 A current capability is identified;
 - blinks 3 times every 2 seconds when a Source USB Type-C® 3 A current capability is identified.

1.3.1.3.1 Dead battery operation mode

- Step 1.** Repeat steps 1- 4 described in Section 1.3.1.3
- Step 2.** Disconnect the micro-USB cable from NUCLEO-L412RB-P CN1.
- Step 3.** Remove the power selection jumper from the JP2 header on NUCLEO-L412RB-P development board (previously set on STLK 1-2 pins) and leave it fully open.
- Step 4.** On the X-NUCLEO-SNK1M1, set LDO OUT jumper (JP3) and NRST jumper (JP4).
- Step 5.** Plug a Source board to X-NUCLEO-SNK1M1 CN1 connector through a USB Type-C® cable.
The provided V_{BUS} supplies the Sink solution while the LEDs define the status as previously described.

Note: *The firmware application example designed for the NUCLEO-L412RB-P embeds the USB2.0 driver which can start the USB enumeration when the board is connected to a laptop or a PC. To test this functionality, R8 and R9 solder bridges have to be mounted while R12 and R13 have to be mounted.*

Figure 12. X-NUCLEO-SNK1M1 circuit schematic (1 of 2)


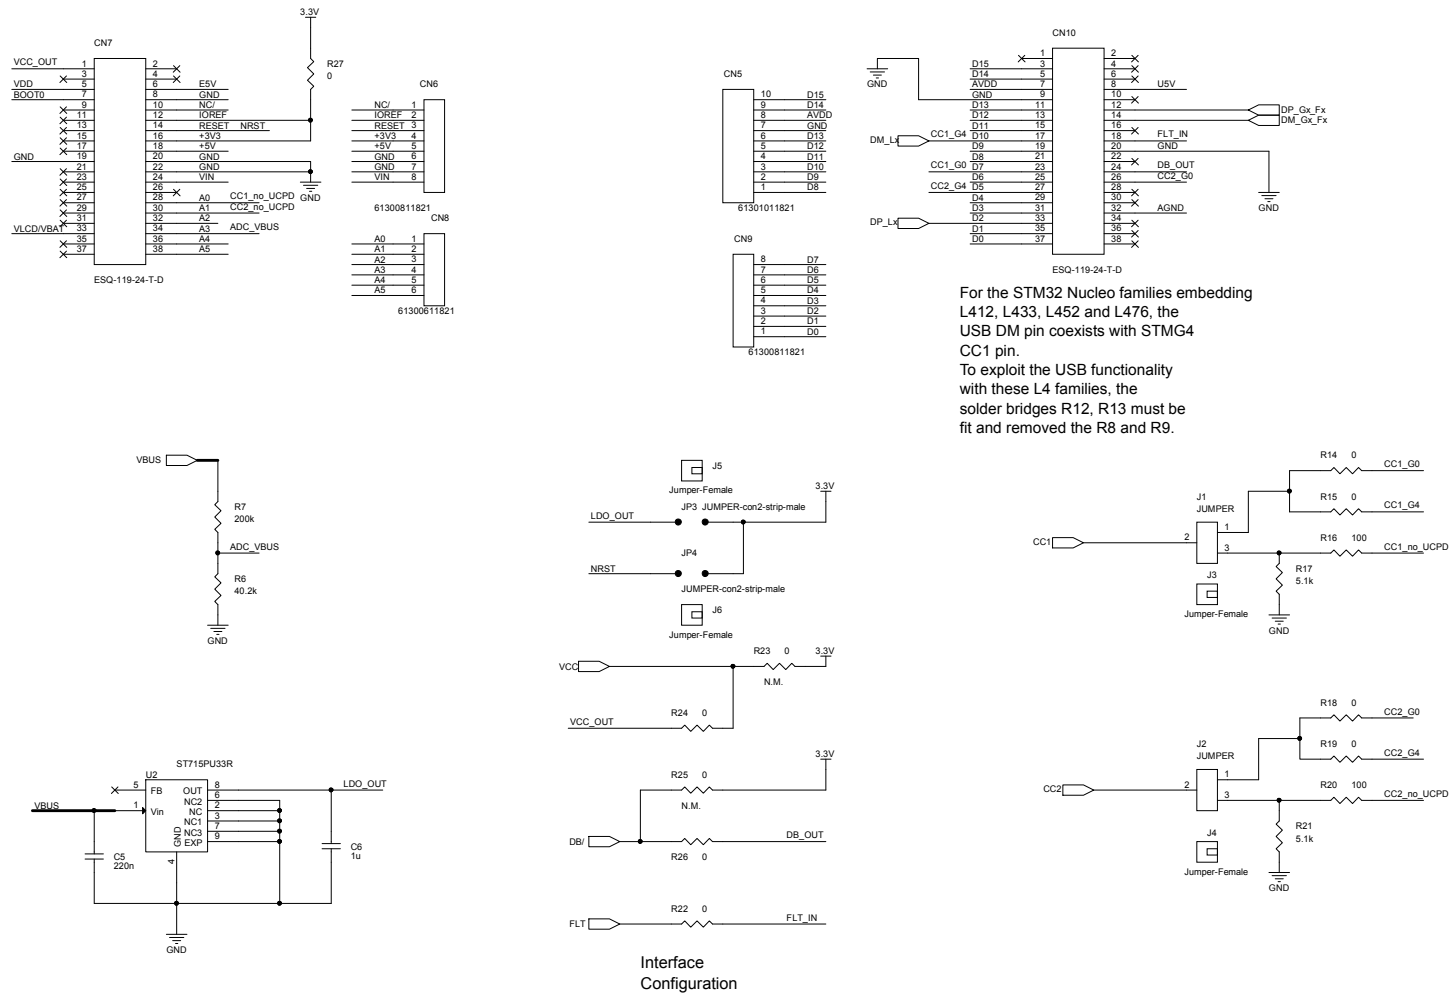


Figure 13. X-NUCLEO-SNK1M1 circuit schematic (2 of 2)

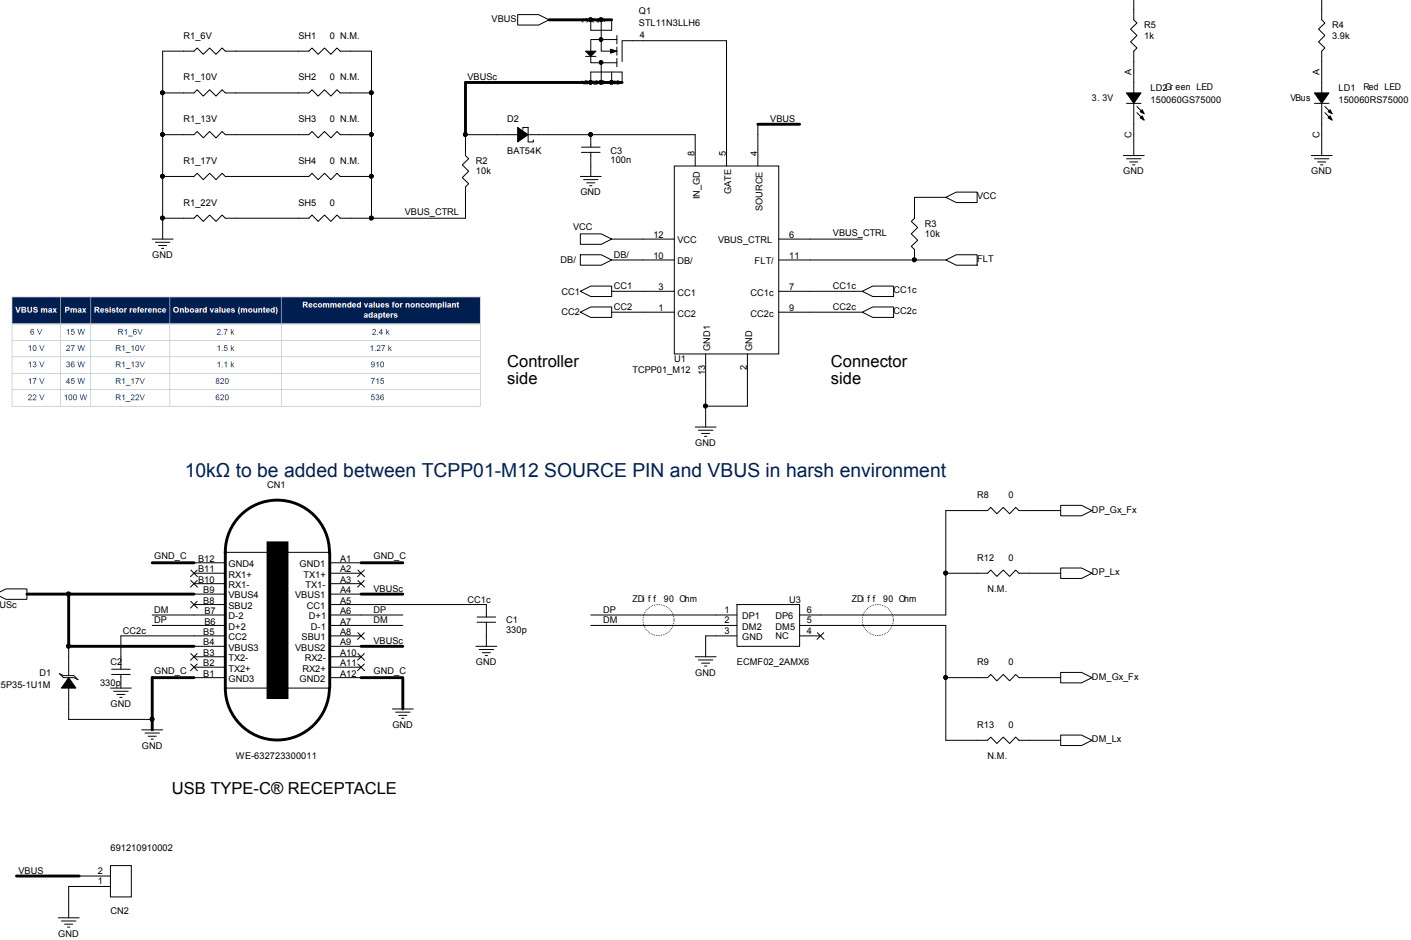

3 Bill of materials

Table 5. X-NUCLEO-SNK1M1 bill of materials

Item	Q.ty	Ref.	Part/value	Description	Manufacturer	Order code
1	2	C1, C2	330 p, 0402 (1005 Metric), 50 Vdc V, $\pm 10\%$, SMD 0402 X7R	Ceramic capacitors	Würth Electronics Inc.	885012205058
2	1	C3	100 n, 0402 (1005 Metric), 50Vdc V, $\pm 10\%$, SMD 0402 X7R	Ceramic capacitor	TDK	C1005X7R1H104K050 BB
3	1	C5	220n, 0402 (1005 Metric), 35Vdc V, $\pm 10\%$, SMD 0402 X7R	Ceramic capacitor	Murata Electronics	GRM155C8YA224ME0 1D
4	1	C6	1 μ F, 0402 (1005 Metric), 6Vdc V, $\pm 10\%$, SMD 0402 X5R	Ceramic capacitor	Kemet	C0402C105K8PAC7411
5	1	CN1	WE-6327233000 11, THT/SM	USB 3.1 Type-C receptacle	Würth Electronics Inc.	632723300011
6	1	CN2	691210910002, 2.54 mm	Terminal block	Würth Electronics Inc.	691210910002
7	1	CN5	61301011821, 10 pos., 0.1, gold PCB	Connector receptacle	Würth Electronics Inc.	61301011821
8	2	CN6, CN9	61300811821, 8 pos., 0.1, gold PCB	Connector receptacles	Würth Electronics Inc.	61300811821
9	2	CN7, CN10	ESQ-119-24-T-D, 38 pos., 0.1, gold PCB	Connector receptacles	Samtec Inc.	ESQ-119-24-T-D
10	1	CN8	61300611821, 6 pos., 0.1, gold PCB	Connector receptacle	Würth Electronics Inc.	61300611821
11	1	D1	ESDA25P35-1U1 M, 2-UDFN, 1400 W (1.4 kW)	High power transient voltage suppressor	ST	ESDA25P35-1U1M
12	1	D2	BAT54K, SC-79, SOD-523, 900 mV @ 100 mA V, 300mA (DC) A	General purpose Schottky diode	ST	BAT54KFILM
13	2	J1, J2	Jumper, 3 pos.	Connector header	AMTEK	PH1S25-1x03GB6/3-L
14	1	J3 FIT ON PIN 1-2 OF J1	Jumper,female	Connector jumper	AMTEK	MJ1B-AGB-L
15	1	J4, FIT ON PIN 1-2 OF J2	Jumper,female	Connector jumper	AMTEK	MJ1B-AGB-L
16	2	J5, J6 PROVIDE BUT NOT ASSEMBLY	Jumper,female	Connector jumpers	AMTEK	MJ1B-AGB-L

Item	Q.ty	Ref.	Part/value	Description	Manufacturer	Order code
17	2	JP3, JP4	Jumpers, con2-strip-male	Connector jumpers	AMTEK	PH1S25-1x02GB6/3-L
18	1	LD1	150060RS75000, 0603 (1608 Metric), 20 m A	Red LED	Würth Electronics Inc.	150060RS75000
19	1	LD2	150060GS75000, 0603 (1608 Metric), 20 m A	Green LED	Würth Electronics Inc.	150060GS75000
20	1	Q1	STL11N3LLH6, 8-PowerVDFN	STripFET H6 Power MOSFET in a PowerFLAT 3.3 x 3.3 package	ST	STL11N3LLH6
21	2	R2, R3	10 k, 0402 (1005 Metric), 0.063W, 1/16 W, $\pm 1\%$	Chip resistors	Yageo	RC0402FR-0710KL
22	1	R4	3.9 k, 0402 (1005 Metric), 0.063W, 1/16 W, $\pm 0.1\%$	Chip resistor	Vishay	CRCW04023K90FKED
23	1	R5	1k, 0402 (1005 Metric), 0.063W, 1/16 W, $\pm 1\%$	Chip resistor	Vishay	CRCW04021K00FKED
24	1	R6	40.2 k, 0402 (1005 Metric), 0.063 W, 1/16 W, $\pm 1\%$	Chip resistor	Vishay	CRCW040240K2FKED
25	1	R7	200 k, 0402 (1005 Metric), 0.063W, 1/16 W, $\pm 1\%$	Resistor	Vishay	CRCW0402200KFKED C
27	10	R8, R9, R14, R15, R18, R19, R22, R24, R26, R27	0, 0805 (2012 Metric), 1/8 W	Resistors	Yageo	RC0805JR-070RL
28	4	R12, R13, R23, R25	0805 (2012 Metric), 0.125 W, 1/8 W	Resistors (not mounted)	Yageo	RC0805JR-070RL
29	2	R17, R21	5.1 k, 0402 (1005 Metric), 1/16 W, $\pm 1\%$	Chip resistors	Vishay	CRCW04025K10FKED
30	1	R1_10V	1.5 k, 0402 (1005 Metric), 1/4 W, $\pm 1\%$	Chip resistor	Yageo	RC0402FR-071K5L
31	1	R1_13V	1.1 k, 0402 (1005 Metric), 1/4 W, $\pm 1\%$	Chip resistor	Multicomp	MCWR04X1101FTL
32	1	R1_17V	820, 0402 (1005 Metric), 1/4 W, $\pm 1\%$	Chip resistor	Vishay	CRCW0402820RFKED
33	1	R1_22V	620, 0402 (1005 Metric), 1/16 W, $\pm 1\%$	Chip resistor	Yageo	RC0402FR-07620RL
34	1	R1_6V	2.7 k, 0402 (1005 Metric), 1/4 W, $\pm 1\%$	Chip resistor	Yageo	RC0402FR-072K7L

Item	Q.ty	Ref.	Part/value	Description	Manufacturer	Order code
35	4	SH1, SH2, SH3, SH4	0, 0805-Solder Bridge	Jumpers (not mounted)	Any	Any
36	1	SH5	0, 0805-Solder Bridge	Jumper	Any	Any
37	1	U1	TCPP01-M12, 3X3X1 mm,	Overvoltage protection for USB-C or Power Delivery	ST	TCPP01-M12
38	1	U2	ST715PU33R, 8-VDFN Exposed Pad	High input voltage - 85 mA LDO linear regulator	ST	ST715PU33R
39	1	U3	ECMF02_2AMX6, 6-UFQFN, 200 mA	Common-mode filter and ESD protection for USB 2.0 and MIPI/MDDI interfaces	ST	ECMF02-2AMX6
40	1		PCB, 72.6x58.6 mm	FR4 Standard 72.6x58.6x1.5 5 mm	Massive PCB Technologies LTD	PROT-X-NUCLEO-SNK1M1-ver.2 (0EC0C1)

Revision history

Table 6. Document revision history

Date	Version	Changes
15-Mar-2021	1	Initial release.
15-Apr-2021	2	Added NUCLEO-G0B1RE development board compatibility information.
10-May-2021	3	Updated Section 1.2.1 Type-C connector and Section 1.3.1.2.1 Dead battery operation mode.
02-Feb-2022	4	Updated Section 1.2.2 TCPP01-M12 USB Type-C™ protection and VBUS overvoltage protection setup.
01-Mar-2022	5	Updated Section 1.2 Hardware architecture, Section 1.2.7 Dead battery mode configuration jumpers and internal LDO, Section 1.3.1.1 Running the demo application with NUCLEO-G071RB or NUCLEO-G0B1RE development board, Section 1.3.1.2 Running the demo application with NUCLEO-G474RE development board, Section 1.3.1.3 Running the demo application with NUCLEO-L412RB-P development board, and Section 2 Schematic diagrams.
02-Aug-2022	6	Updated Section 1.2.2 TCPP01-M12 USB Type-C® protection and VBUS overvoltage protection setup and Section 2 Schematic diagrams.
20-Sep-2022	7	Updated Section 1.2.2: TCPP01-M12 USB Type-C® protection and VBUS overvoltage protection setup and Section 2: Schematic diagrams.
16-Jul-2024	8	Updated <i>Section 2: Schematic diagrams</i> and <i>Section 1.2.2: TCPP01-M12 USB Type-C® protection and VBUS overvoltage protection setup</i> .
20-May-2025	9	Updated Section 1.2.2: TCPP01-M12 USB Type-C® protection and V_{BUS} overvoltage protection setup .

Contents

1	Getting started	2
1.1	Overview	2
1.2	Hardware architecture	2
1.2.1	USB Type-C® connector	4
1.2.2	TCCP01-M12 USB Type-C® protection and V_{BUS} overvoltage protection setup	5
1.2.3	CC lines and configuration jumpers	6
1.2.4	USB 2.0 data path and configuration setting	7
1.2.5	ST morpho and Arduino UNO V3 connectors	8
1.2.6	Indication LEDs	8
1.2.7	Dead battery mode configuration jumpers and internal LDO	9
1.2.8	Power connector	10
1.3	Demo application setup	10
1.3.1	Programming and debugging	10
2	Schematic diagrams	14
3	Bill of materials	16
	Revision history	19
	List of tables	21
	List of figures	22

List of tables

Table 1.	Resistor values	5
Table 2.	N-MOSFET performance tradeoff.	6
Table 3.	J1 and J2 CC lines configuration setting jumpers	7
Table 4.	JP3 and JP4 power mode selection jumpers	9
Table 5.	X-NUCLEO-SNK1M1 bill of materials	16
Table 6.	Document revision history	19

List of figures

Figure 1.	X-NUCLEO-SNK1M1 expansion board	1
Figure 2.	X-NUCLEO-SNK1M1 main functional blocks (top view)	3
Figure 3.	X-NUCLEO-SNK1M1 main functional blocks (bottom view)	4
Figure 4.	Type-C receptacle (CN1) and ESDA25P35-1U1M TVS diode (D1)	4
Figure 5.	TCCP01-M12 protection (U1) driving the STL11N3LLH6 MOS (Q1).	5
Figure 6.	CC line configuration jumpers	6
Figure 7.	USB2.0 data lines protection ECMF02-2AMX6 (U3) and resistor setup	7
Figure 8.	ST morpho and Arduino UNO V3 connectors	8
Figure 9.	Indication LEDs	9
Figure 10.	Dead battery mode circuitry	9
Figure 11.	CN2 power connector	10
Figure 12.	X-NUCLEO-SNK1M1 circuit schematic (1 of 2).	14
Figure 13.	X-NUCLEO-SNK1M1 circuit schematic (2 of 2).	15

IMPORTANT NOTICE – READ CAREFULLY

STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST's terms and conditions of sale in place at the time of order acknowledgment.

Purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of purchasers' products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

ST and the ST logo are trademarks of ST. For additional information about ST trademarks, refer to www.st.com/trademarks. All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

© 2025 STMicroelectronics – All rights reserved