

---

## Getting started with MotionPM real-time pedometer library in X-CUBE-MEMS1 expansion for STM32Cube

### Introduction

The MotionPM is a middleware library part of [X-CUBE-MEMS1](#) software and runs on STM32. It provides real-time information about the number of steps and cadence just performed by the user with the device, such as a cell phone.

This library is intended to work with ST MEMS only.

The algorithm is provided in static library format and is designed to be used on STM32 microcontrollers based on the ARM Cortex-M3 or ARM Cortex-M4 architecture.

It is built on top of [STM32Cube](#) software technology that eases portability across different STM32 microcontrollers.

The software comes with sample implementation running on [X-NUCLEO-IKS01A2](#) or [X-NUCLEO-IKS01A3](#) expansion board on a [NUCLEO-F401RE](#), [NUCLEO-L476RG](#) or [NUCLEO-L152RE](#) development board.

## 1 Acronyms and abbreviations

---

**Table 1. List of acronyms**

Acronym	Description
API	Application programming interface
BSP	Board support package
GUI	Graphical user interface
HAL	Hardware abstraction layer
IDE	Integrated development environment

## 2 MotionPM middleware library in X-CUBE-MEMS1 software expansion for STM32Cube

### 2.1 MotionPM overview

The MotionPM library expands the functionality of the [X-CUBE-MEMS1](#) software.

The library acquires data from the accelerometer and provides information about the number of steps and cadence just performed by the user with the device.

The library is designed for ST MEMS only. Functionality and performance when using other MEMS sensors are not analyzed and can be significantly different from what described in the document.

Sample implementation is available for [X-NUCLEO-IKS01A2](#) and [X-NUCLEO-IKS01A3](#) expansion boards, mounted on a [NUCLEO-F401RE](#), [NUCLEO-L476RG](#) or [NUCLEO-L152RE](#) development board.

### 2.2 MotionPM library

Technical information fully describing the functions and parameters of the MotionPM APIs can be found in the MotionPM\_Package.chm compiled HTML file located in the Documentation folder.

#### 2.2.1 MotionPM library description

The MotionPM pedometer library manages the data acquired from the accelerometer; it features:

- possibility to detect the number of steps and cadence
- recognition based only on accelerometer data
- required accelerometer data sampling frequency is 50 Hz
- resources requirements:
  - Cortex-M3: 8.9 kB of code and 3.6 kB of data memory
  - Cortex-M4: 8.6 kB of code and 3.6 kB of data memory
- available for ARM Cortex-M3 and Cortex-M4 architectures

#### 2.2.2 MotionPM APIs


The MotionPM library APIs are:

- `uint8_t MotionPM_GetLibVersion(char *version)`
  - retrieves the library version
  - `*version` is a pointer to an array of 35 characters
  - returns the number of characters in the version string
- `void MotionPM_Initialize(void)`
  - performs MotionPM library initialization and setup of the internal mechanism
  - the CRC module in STM32 microcontroller (in RCC peripheral clock enable register) has to be enabled before using the library

*Note: This function must be called before using the pedometer library.*
- `void MotionPM_Update (MPM_input_t *data_in, MPM_output_t *data_out)`
  - executes pedometer algorithm
  - `*data_in` parameter is a pointer to a structure with input data
  - the parameters for the structure type `MPM_input_t` are:
    - `AccX` is the accelerometer sensor value in X axis in g
    - `AccY` is the accelerometer sensor value in Y axis in g
    - `AccZ` is the accelerometer sensor value in Z axis in g
  - `*data_out` parameter is a pointer to a structure with output data
  - the parameters for the structure type `MPM_output_t` are:
    - `Nsteps` is the number of steps performed by the user
    - `Cadence` is the user step cadence

### 2.2.3 API flow chart

Figure 1. MotionPM API logic sequence

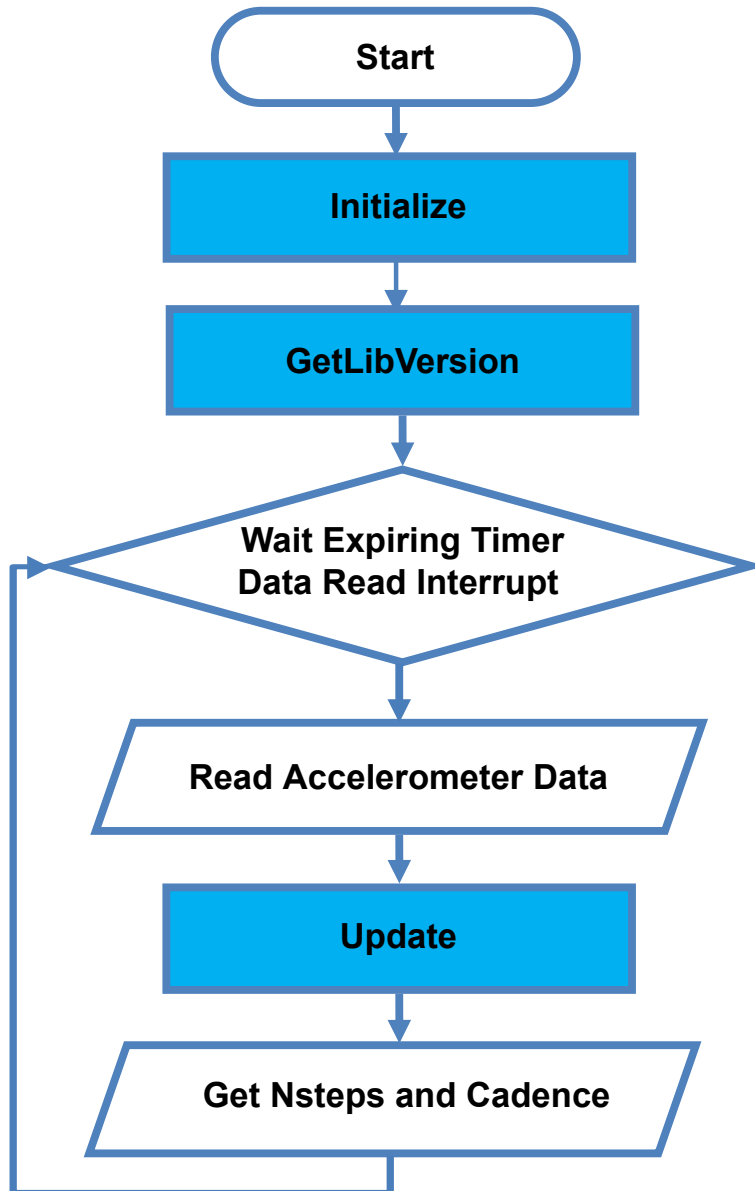

### 2.2.4 Demo code

The following demonstration code reads data from the accelerometer sensor and gets the number of steps and cadence.

```

[...]
#define VERSION_STR LENG 35
[...]

/** Initialization **/
char lib_version[VERSION_STR LENG];

/* Pedometer API initialization function */
MotionPM_manager_init(ACCELERO_handle);
  
```

```

/* OPTIONAL */
/* Get library version */
MotionPM_manager_get_version(lib_version, &lib_version_len);

[...]

/** Using Pedometer algorithm */
Timer_OR_DataRate_Interrupt_Handler()
{
MPM_input_t data_in;
MPM_output_t data_out;

/* Get acceleration X/Y/Z in g */
MEMS_Read_AccValue(&data_in.AccX, &data_in.AccY, &data_in.AccZ);

/* Run pedometer algorithm */
MotionPM_manager_run(&data_in, &data_out);
}

```

### 2.2.5 Algorithm performance

The pedometer algorithm only uses data from the accelerometer and runs at a low frequency (50 Hz) to reduce power consumption.

It detects and provides real-time information about the number of steps and cadence the user performed with his device.

**Table 2. Elapsed time (µs) algorithm**

Cortex-M4 STM32F401RE at 84 MHz									Cortex-M3 STM32L152RE at 32 MHz								
SW4STM32 2.6.0 (GCC 7.2.1)			IAR EWARM 7.80.4			Keil µVision 5.24			SW4STM32 2.6.0 (GCC 7.2.1)			IAR EWARM 7.80.4			Keil µVision 5.24		
Min	Avg	Max	Min	Avg	Max	Min	Avg	Max	Min	Avg	Max	Min	Avg	Max	Min	Avg	Max
2	270	1519	2	153	906	2	400	2398	325	588	4951	4	938	5260	9	1230	7355

### 2.3 Sample application

The MotionPM middleware can be easily manipulated to build user applications; a sample application is provided in the Application folder.

It is designed to run on a [NUCLEO-F401RE](#), [NUCLEO-L476RG](#) or [NUCLEO-L152RE](#) development board connected to [X-NUCLEO-IKS01A2](#) or [X-NUCLEO-IKS01A3](#) expansion board.

The application recognizes the steps and cadence in real-time. Data can be displayed through a GUI or stored in the board for offline analysis.

#### Stand-alone mode


In stand-alone mode, the sample application allows the user to detect performed steps and cadence and store them in the MCU flash memory.

The STM32 Nucleo board may be supplied by a portable battery pack (to make the user experience more comfortable, portable and free of any PC connections).

**Table 3. Power supply scheme**

Power source	JP1 settings	Working mode
USB PC cable	JP1 open	PC GUI driven mode
Battery pack	JP1 closed	Stand-alone mode

Figure 2. STM32 Nucleo: LEDs, button, jumper

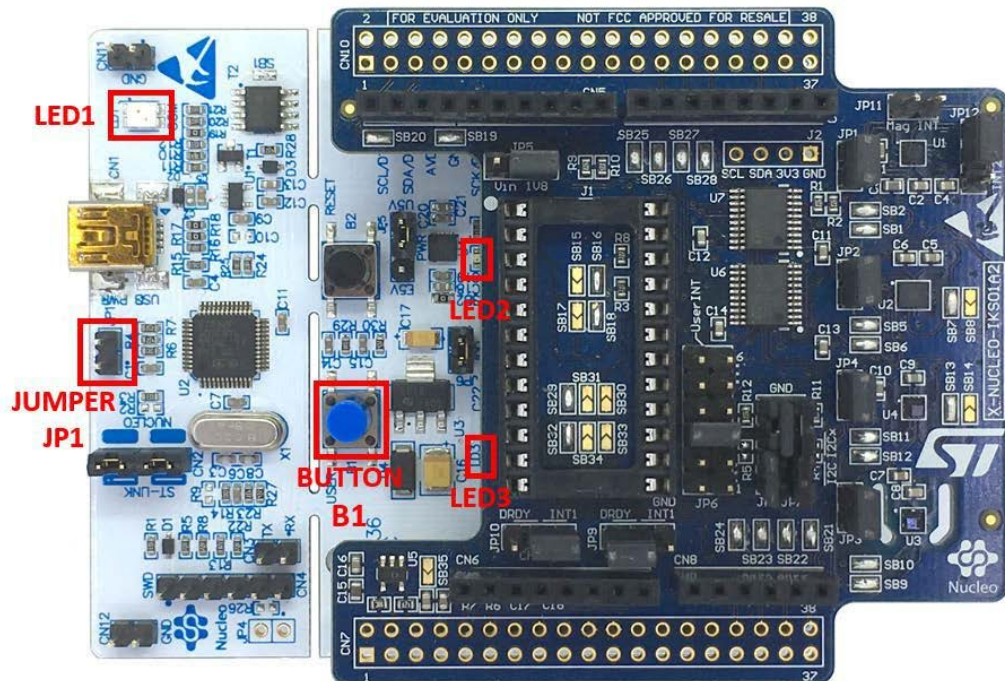

The above figure shows the user button B1 and the three LEDs of the NUCLEO-F401RE board. Once the board is powered, LED LD3 (PWR) turns ON and the tricolor LED LD1 (COM) begins blinking slowly due to the missing USB enumeration (refer to UM1724 on [www.st.com](http://www.st.com) for further details).

**Note:** After powering the board, LED LD2 blinks once indicating the application is ready. When the user button B1 is pressed, the system starts acquiring data from the accelerometer sensor and detects the gesture; during this acquisition mode, a fast LED LD2 blinking indicates that the algorithm is running. During this phase, the detected device gesture is stored in the MCU internal flash memory. Data are automatically saved every 5 minutes to avoid excessive data loss in case of an unforeseen power fault. Pressing button B1 a second time stops the algorithm and data storage and LED LD2 switches off. Pressing the button again starts the algorithm and data storage once again. The flash sector dedicated to data storage is 128 KB, allowing memorization of more than 16,000 data sets. To retrieve those data, the board has to be connected to a PC, running Unicleo-GUI. When stored data is retrieved via the GUI, the MCU flash sector dedicated to this purpose is cleared. If LED LD2 is ON after powering the board, it represents a warning message indicating the flash memory is full.

**Note:** Optionally, the MCU memory can be erased by holding the user push button down for at least 5 seconds. LED LD2 switches OFF and then blinks 3 times to indicate that the data stored in the MCU has been erased. This option is available only after power ON or reset of the board while LED LD2 is ON indicating the flash memory is full.

When the application runs in stand-alone mode and the flash memory is full, the application switches to PC GUI drive mode and LED LD2 switches OFF.

The flash memory must be erased by downloading data via the Unicleo-GUI or the user push button (see the above note).

#### PC GUI drive mode

In this mode, a USB cable connection is required to monitor real-time data. The board is powered by the PC via USB connection. This working mode allows the user to display detected gesture, accelerometer data, time stamp and eventually other sensor data, in real-time, using the Unicleo-GUI.


In this working mode, data are not stored in the MCU flash memory.

## 2.4 Unicleo-GUI application

The sample application uses the Windows **Unicleo-GUI** utility, which can be downloaded from [www.st.com](http://www.st.com).


- Step 1.** Ensure that the necessary drivers are installed and the **STM32 Nucleo** board with appropriate expansion board is connected to the PC.
- Step 2.** Launch the Unicleo-GUI application to open the main application window.  
If an STM32 Nucleo board with supported firmware is connected to the PC, it is automatically detected and the appropriate COM port is opened.

Figure 3. Unicleo main window

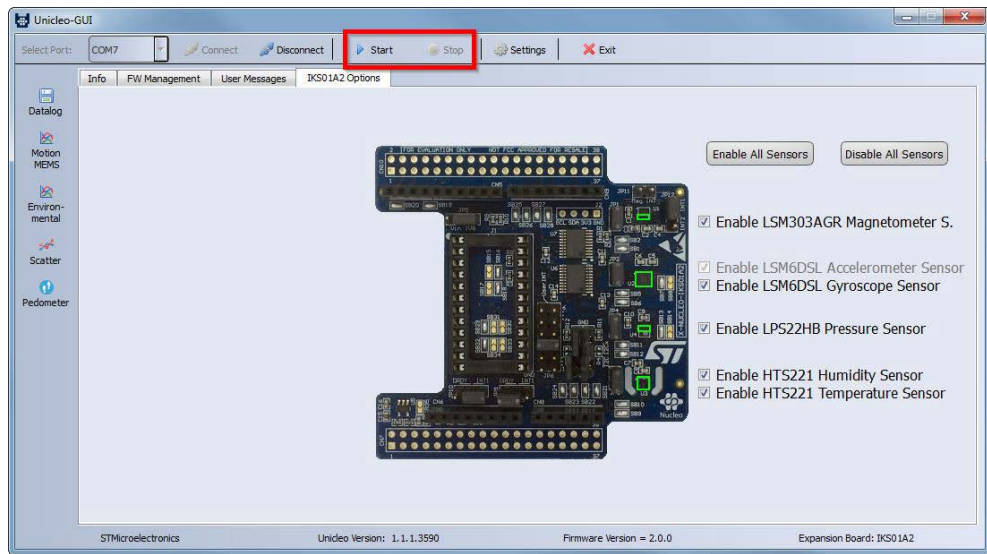


- Step 3.** Start and stop data streaming by using the appropriate buttons on the vertical tool bar. The data coming from the connected sensor can be viewed in the User Messages tab.

Figure 4. User Messages tab

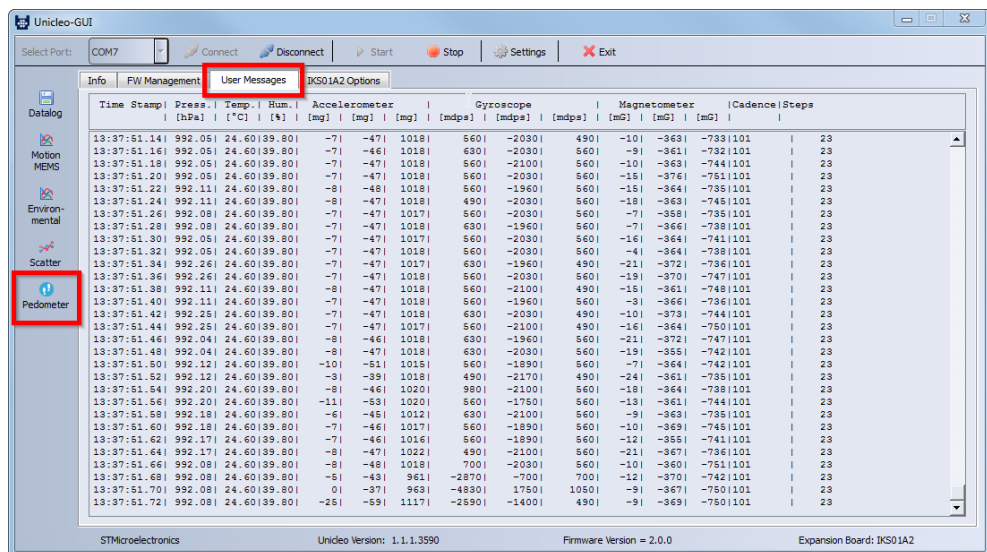

- Step 4.** Click on the Pedometer icon in the vertical tool bar to open the dedicated application window.

Figure 5. Pedometer window

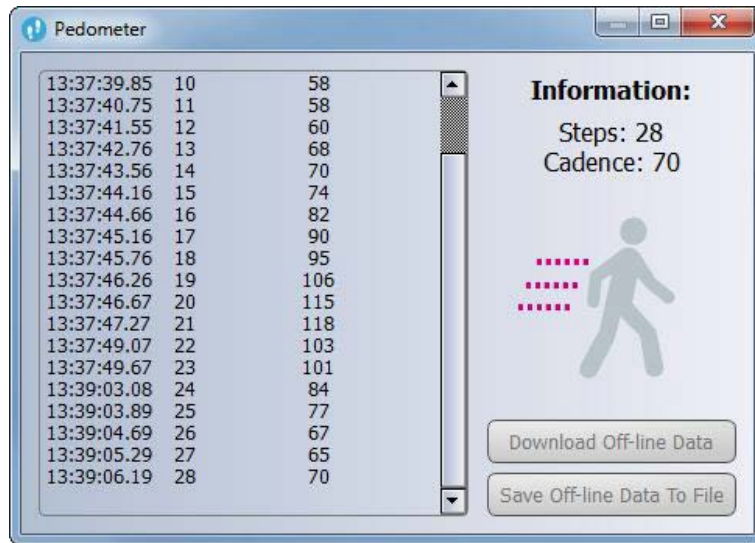


If the board has been working in stand-alone mode and the user wants to retrieve stored data, press Download Off-line Data button to upload the stored activities data to the application. This operation automatically deletes acquired data from microcontroller.

Press the Save Off-line Data to File button to save the uploaded data in a .tsv file.

- Step 5.** Click on the Datalog icon in the vertical tool bar to open the datalog configuration window: you can select which sensor and activity data to save in files. You can start or stop saving by clicking on the corresponding button.

Figure 6. Datalog window

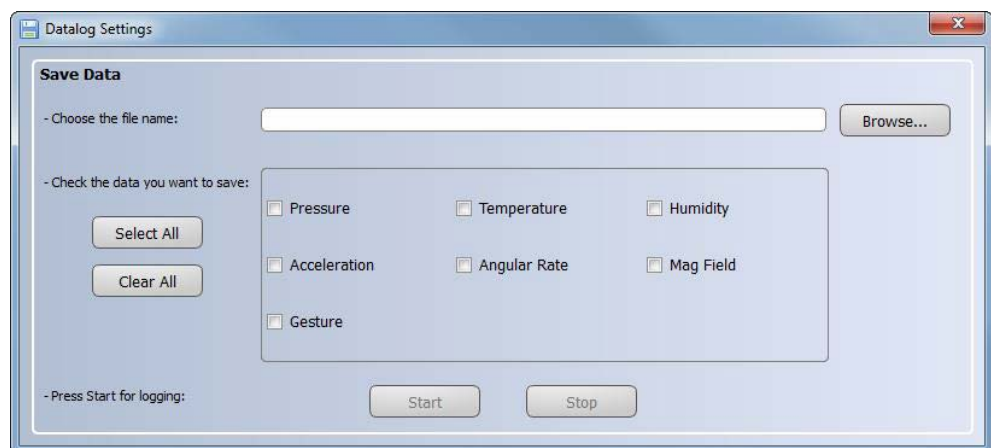



### 3 References

---

All of the following resources are freely available on [www.st.com](http://www.st.com).

1. UM1859: Getting started with the X-CUBE-MEMS1 motion MEMS and environmental sensor software expansion for STM32Cube
2. UM1724: STM32 Nucleo-64 board
3. UM2128: Getting started with Unicleo-GUI for motion MEMS and environmental sensor software expansion for STM32Cube

## Revision history

**Table 4. Document revision history**

Date	Version	Changes
06-Jun-2017	1	Initial release.
06-Feb-2018	2	Added references to NUCLEO-L152RE development board and Table 2. Elapsed time ( $\mu$ s) algorithm..
20-Mar-2018	3	Updated Introduction and Section 2.1 MotionPM overview.
20-Feb-2019	4	Updated <a href="#">Table 2. Elapsed time (<math>\mu</math>s) algorithm.</a> Added X-NUCLEO-IKS01A3 expansion board compatibility information.

## Contents

<b>1</b>	<b>Acronyms and abbreviations</b>	<b>2</b>
<b>2</b>	<b>MotionPM middleware library in X-CUBE-MEMS1 software expansion for STM32Cube</b>	<b>3</b>
2.1	MotionPM overview	3
2.2	MotionPM library	3
2.2.1	MotionPM library description	3
2.2.2	MotionPM APIs	3
2.2.3	API flow chart	4
2.2.4	Demo code	4
2.2.5	Algorithm performance	5
2.3	Sample application	5
2.4	Unicleo-GUI application	7
<b>3</b>	<b>References</b>	<b>9</b>
	<b>Revision history</b>	<b>10</b>

## List of tables

<b>Table 1.</b>	List of acronyms . . . . .	2
<b>Table 2.</b>	Elapsed time ( $\mu\text{s}$ ) algorithm . . . . .	5
<b>Table 3.</b>	Power supply scheme . . . . .	5
<b>Table 4.</b>	Document revision history . . . . .	10

## List of figures

Figure 1.	MotionPM API logic sequence . . . . .	4
Figure 2.	STM32 Nucleo: LEDs, button, jumper . . . . .	6
Figure 3.	Unicleo main window . . . . .	7
Figure 4.	User Messages tab . . . . .	7
Figure 5.	Pedometer window . . . . .	8
Figure 6.	Datalog window . . . . .	8

**IMPORTANT NOTICE – PLEASE READ CAREFULLY**

STMicroelectronics NV and its subsidiaries (“ST”) reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST’s terms and conditions of sale in place at the time of order acknowledgement.

Purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of Purchasers’ products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

ST and the ST logo are trademarks of ST. All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

© 2019 STMicroelectronics – All rights reserved